Washer/Extractor

AC Adjustable Frequency Drive Information

For Allen-Bradley Model Numbers:

160
1305
1336
PowerFlex 40

Supplement

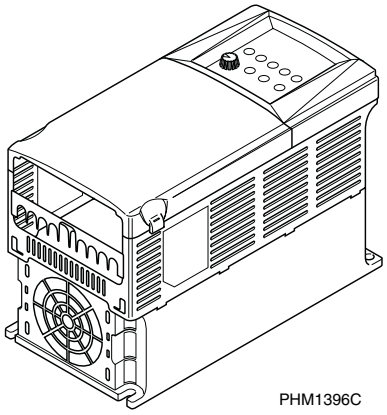

PHM1396C

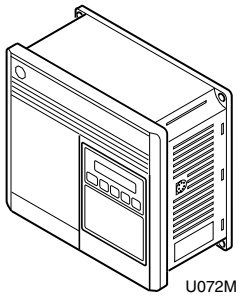

U072M

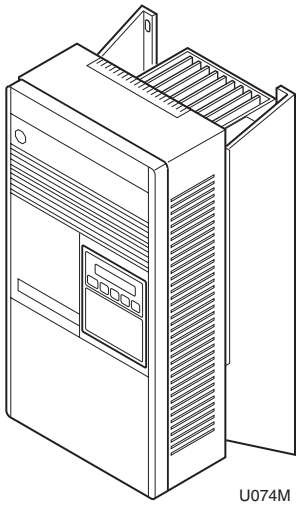

U074M

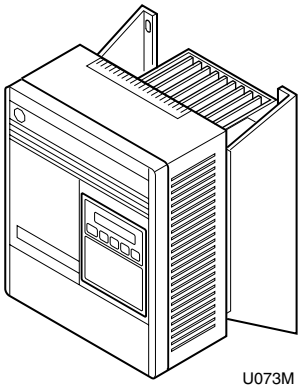

U073M

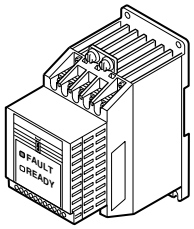

U071M

Alliance Laundry Systems

Part No. F232120R4
March 2008

Table of Contents

General Information 3
Nameplate Location 4
General Inspection 5
Storage 5

Installation/Wiring 6
Electrical Interference 6
EMI 6
RFI 6
Input Power Conditioning 7
Terminal Block Access 10
A-B 160 10
A-B 1305 11
A-B 1336 12
PowerFlex 40 13
Power Terminal Block Description/Torque Specifications 14
A-B 160 14
A-B 1305 15
A-B 1336 16
PowerFlex 40 17
PowerFlex 400 17
Control Terminal Blocks Description/Control Logic/Torque Specifications 18
A-B 160 – Control Terminal Block (TB3) Function 18
A-B 1305 – Control Terminal Block (TB2) Function 20
A-B 1336 Control Terminal (TB2/TB3) Function 24
A-B PowerFlex 40/400 Control Terminal Function 29

AC Drive Diagnostics/Parameter Viewing 37
A-B 160 Program Keypad Module (PKM or Parameter Unit) 37
Installation/Removal 37
Program Keypad Module (PKM) Operation 38
A-B 160 CopyCat Keypad 40
Remote Programming Adapter (RPA) Installation/Removal 40
CopyCat Keypad Operation 42
Selecting a Parameter 43
A-B 1305/1336 Human Interface Module (HIM or Parameter Unit) 44
Installation/Removal 44
Human Interface Module (HIM) Operation 45
HIM Structure Chart – Series A 3.00, Series B 1.01 or Later Versions 47
HIM Structure Chart – Earlier Versions 48
Displaying Metering Information 49
Displaying Fault Buffers 50
Displaying Linear List of Parameters 51
PowerFlex Human Interface Module (HIM or Parameter Unit) 52
Integral Keypad 52
Viewing and Editing Parameters 55

© Copyright 2008, Alliance Laundry Systems LLC
All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the expressed written consent of the publisher.

© Copyright 2006, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Fault Display and Troubleshooting Information 56
Fault Code Identification 56
A-B 160 56
A-B 1305/A-B 1336 57
PowerFlex Series Drives 59
Allen-Bradley Drive Fault Codes 60
Troubleshooting Suggestions 62
Important Considerations 62
Problem/Corrective Action 62

© Published by permission of the copyright owner – DO NOT COPY or TRANSMIT

General Information

Obtain specific steam service pipe sizes from steam system supplier or a qualified steam fitter.

- This drive contains ESD (Electrostatic Discharge) sensitive parts and assemblies. Static control precautions are required when installing, testing, or servicing this assembly. Component damage may result if ESD control procedures are not followed.
- An incorrectly applied or installed drive can result in component damage or a reduction in product life. Wiring or application errors, such as incorrect or inadequate AC supply or excessive ambient temperatures, may result in malfunction of the system.
- This drive contains power storage devices that retain their charge for a time after the removal of main power. Extreme caution should be used when working in and around the drive. It is recommended that main disconnect power to the drive remain off for three minutes prior to approaching connections.

Warnings specific to a particular subject will appear in the manual with the discussion of that subject.

CAUTION

Only personnel familiar with the drive and associated machinery should plan or implement the installation, start-up, and subsequent maintenance of the system. Failure to comply may result in personal injury and/or equipment damage.

W659

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Nameplate Location

Pertinent drive information used in obtaining information on drive operation or replacement is located on the nameplate shown in *Figures 1* through *3*.

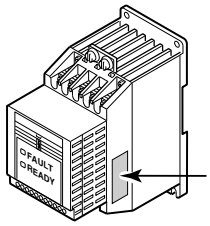

Nameplate Located on Exterior of Enclosure

160 NAMEPLATE LOCATION

U146ME3A

Figure 1

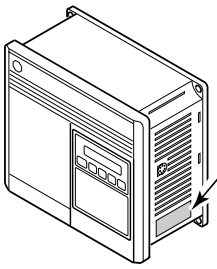

Nameplate Located on Exterior of Enclosure

1305 NAMEPLATE LOCATION

U072ME3A

Figure 2

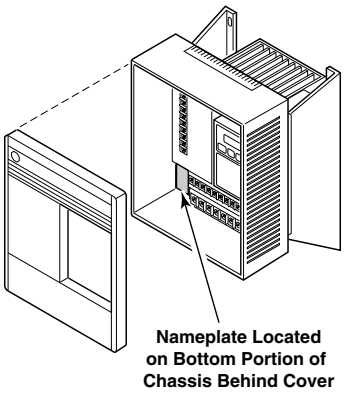

Nameplate Located on Bottom Portion of Chassis Behind Cover

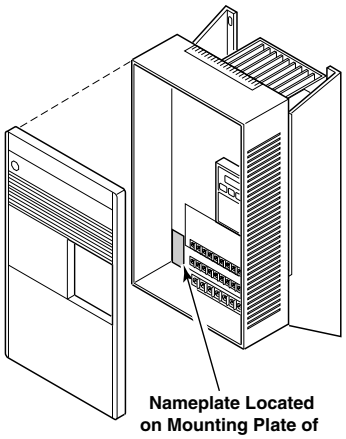

Nameplate Located on Mounting Plate of Main Control Board

FRAMES A1, A2, A3, A4

FRAMES B-G

1336 PLUS NAMEPLATE LOCATION

U147ME3A

Figure 3

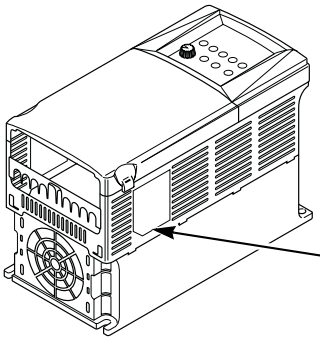

Nameplate Located on Exterior of Enclosure.

POWERFLEX 40 NAMEPLATE LOCATION

PHM1396C

Figure 4

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

General Inspection

Upon delivery, verify the item's nameplate catalog number against the purchase order.

Before the installation and start-up of the drive, a general inspection of the mechanical integrity (i.e., loose parts, wires, connections, etc.) should be made.

Storage

The drive should remain in its shipping container prior to installation. If the equipment is not to be used for a period of time, it must be stored according to the following instructions in order to maintain warranty coverage:

- Store in a clean, dry location.
- Store within an ambient temperature range of -40 to 70 degrees C.
- Store within a relative humidity range of 0 to 95 percent.
- Do not store equipment where it could be exposed to a corrosive atmosphere.
- Do not store equipment in a construction area.

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Installation/Wiring

CAUTION

An incorrectly installed system can result in component damage or reduction in product life. The most common causes are:

1. Wiring AC line to drive output or control terminals.

2. EXTERNAL voltage application to control terminals.

3. Incorrect or inadequate AC supply.

Contact factory for assistance with application or wiring.

W660

Electrical Interference

EMI

Careful attention must be given to the arrangement of power and ground connections to the drive to avoid interference with nearby sensitive equipment. Be sure to replace all ground connections to their appropriate locations.

RFI

Drives can be installed with an RFI filter, which controls high-frequency conducted emissions into the main supply lines.

Where it is essential that very low emission levels must be achieved or if conformity with standards is required, the optional RFI filter may be present. *Figure 5* displays an electrical schematic for various RFI configurations. *Table 2* shows associated RFI filter part numbers.

CAUTION

ELECTRIC SHOCK HAZARD! Service and maintenance to be performed only by an authorized technician. Disconnect power before opening any access panels.

W661

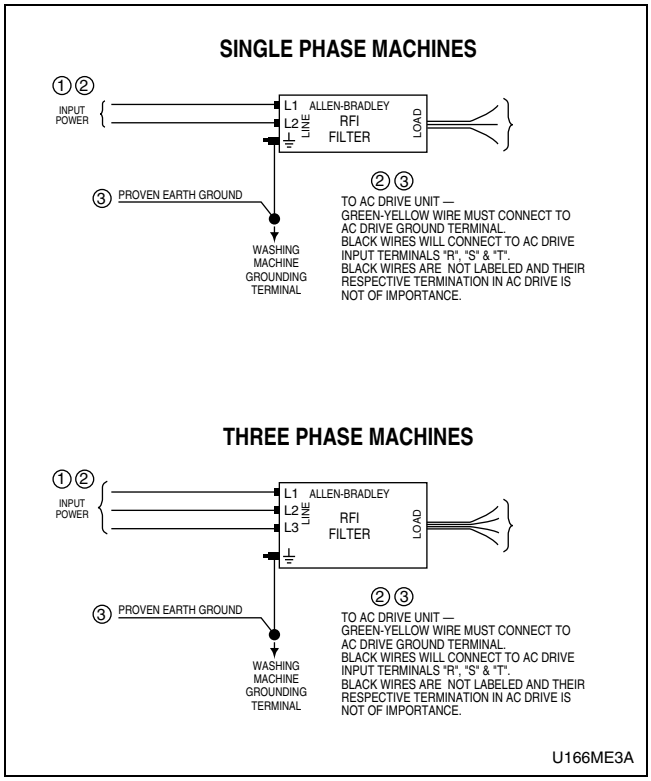
SINGLE PHASE MACHINES
①②
INPUT POWER
L1
L2
LINE
ALLEN-BRADLEY
RFI FILTER
LOAD
③ PROVEN EARTH GROUND
WASHING MACHINE GROUNDING TERMINAL
②③
TO AC DRIVE UNIT — GREEN-YELLOW WIRE MUST CONNECT TO AC DRIVE GROUND TERMINAL. BLACK WIRES WILL CONNECT TO AC DRIVE INPUT TERMINALS "R", "S" & "T". BLACK WIRES ARE NOT LABELED AND THEIR RESPECTIVE TERMINATION IN AC DRIVE IS NOT OF IMPORTANCE.
THREE PHASE MACHINES
①②
INPUT POWER
L1
L2
L3
LINE
ALLEN-BRADLEY
RFI FILTER
LOAD
③ PROVEN EARTH GROUND
WASHING MACHINE GROUNDING TERMINAL
②③
TO AC DRIVE UNIT — GREEN-YELLOW WIRE MUST CONNECT TO AC DRIVE GROUND TERMINAL. BLACK WIRES WILL CONNECT TO AC DRIVE INPUT TERMINALS "R", "S" & "T". BLACK WIRES ARE NOT LABELED AND THEIR RESPECTIVE TERMINATION IN AC DRIVE IS NOT OF IMPORTANCE.
U166ME3A

Figure 5

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Input Power Conditioning

The drive is suitable for direct connection to input power within the rated voltage of the drive. Listed in *Table 1* are certain input power conditions which may cause component damage or reduction in product life. If any of the conditions exist, as described in *Table 1*, install one of the devices listed under the heading *Corrective Action* on the line side of the drive.

IMPORTANT: Only one device per branch circuit is required. It should be mounted closest to the branch and sized to handle the total current of the branch circuit.

Input Power Condition	Corrective Action
Low Line impedance (less than 1% line reactance)	● Install Line Reactor ● or Isolation Transformer ● or Bus Inductor – 5.5 & 11kW (7.5 & 15 HP) drives only
Greater than 120 kVA supply transformer	
Line has power factor correction capacitors	● Install Line Reactor ● or Isolation Transformer
Line has frequent power interruptions	
Line has intermittent noise spikes in excess of 6000V (lightning)	
Phase to ground voltage exceeds 125% of normal line to line voltage	● Remove MOV jumper to ground. ● or Install Isolation Transformer with gounded secondary if necessary
Ungrounded distribution system	
240V open delta configuration (stinger leg) (1)	● Install Line Reactor
(1) For drives applied on an open delta with a middle phase grounded neutral system, the phase opposite the phase that is tapped in the middle to the neutral or earth is referred to as the “stinger leg,” “high leg,” “red leg,” etc. This leg should be identified throughout the system with red or orange tape on the wire at each connection point. The stinger leg should be connected to the center Phase B on the reactor.	

Table 1

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

A-B RFI Filter Part Number Information			
Drive P/N	**Drive Catalog**	**Machine Voltage**	**Filter P/N**
Bulletin 160 Series C			
370855	160-AA04 Series C	200-240V/1 Phase	330282
370855	160-AA04 Series C	200-240V/3 Phase	330281
370856	160-BA03 Series C	380-480V/3 Phase	330281
370857	160-AA08 Series C	200-240V/1 Phase	330285
370857	160-AA08 Series C	200-240V/3 Phase	330280
370858	160-BA04 Series C	380-480V/3 Phase	330281
370843	160-AA12 Series C	200-240V/1 Phase	Not Available
370843	160-AA12 Series C	200-240V/3 Phase	330280
370844	160-BA06 Series C	380-480V/3 Phase	330280
370853	160-AA18 Series C	200-240V/1 Phase	Not Available
370853	160-AA18 Series C	200-240V/3 Phase	330284
370854	160-BA10 Series C	380-480V/3 Phase	330283
Bulletin 1305			
370815	1305-AA12	200-240V/1 Phase	Not Available
370815	1305-AA12	200-240V/3 Phase	330272
370816	1305-BA06	380-480V/3 Phase	330271
370818	1305-BA09	380-480V/3 Phase	330272
Bulletin 1336			
370838	1336-AQF50	200-240V/1 Phase	Not Available
370838	1336-AQF50	200-240V/3 Phase	330274
370835	1336-BRF50	380-480V/3 Phase	330273
370837	1336-AQF100	200-240V/3 Phase	Not Available
370834	1336-BRF100	380-480V/3 Phase	330274
370828	1336-AO15	200-240V/3 Phase	330268
370825	1336-BO25	380-480V/3 Phase	330268
Bulletin 160 Series A or Series B*			
370839	160-AA04 Series A or B	200-240V/1 Phase	330277
370839	160-AA04 Series A or B	200-240V/3 Phase	330276
370840	160-BA03 Series A or B	380-480V/3 Phase	330275
370841	160-AA08 Series A or B	200-240-V/1 Phase	330277
370841	160-AA08 Series A or B	200-240V/3 Phase	330276
370842	160-BA04 Series A or B	380-480V/3 Phase	330275

Table 2 (continued)

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Table 2 (continued)

PowerFlex 40			
Drive P/N	**Drive Catalog**	**Machine Voltage**	**Filter p/n**
F8044301	22B-B017N104N	200-240V 50-60Hz 3 phase	F8053901
F8044401	22B-D010N104N	380-480V 50-60Hz 3 phase	F8053902
F200309300	22B-B033N104AN	200-240V 50-60Hz 3 phase	F8054001
F200309400	22B-D017N104AN	380-480V 50-60Hz 3 phase	F8054002

*Applies to *C 18-50-lb. models or *F18- and 25-lb. models built before July 1999 with Series A or B drives. If Series A or B drive was replaced with a Series C drive before July 1999, refer to top of table.

Table 2

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Terminal Block Access

WARNING

To reduce risk of electric shock, severe injury or death, allow machine power to remain off for three minutes minimum prior to working in and around AC drive. Proceed with caution.

W662

The following information illustrates the terminal block designations for each of the drive models.

A-B 160

The A-B 160 power and control terminal blocks are located externally. Refer to *Figure 6*.

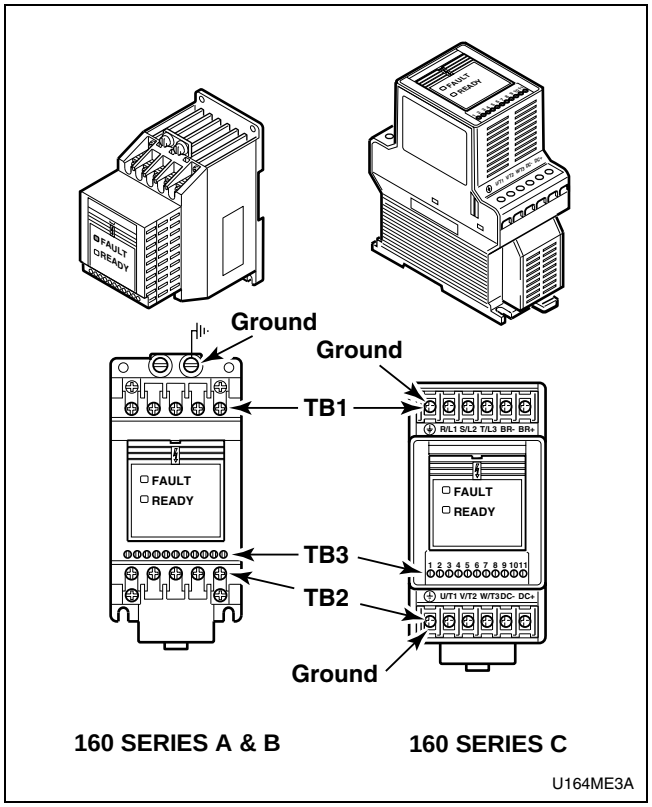

Figure 6

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

A-B 1305

To access the power and control terminal blocks, refer to *Figure 7* and perform the following procedure:

1. Remove power from the machine at main disconnect.
2. Lower hinged panel located below HIM or blank front cover.
3. For drives equipped with a blank front panel, slide panel downward and remove it from drive. Skip to Step 5.
4. For drives equipped with a Human Interface Module (HIM), press retaining lever directly beneath the HIM and slide the HIM downward to remove it from drive.
5. Loosen front panel fastener by rotating counterclockwise 90 degrees. Refer to *Figure 7*.
6. Holding upper corners of front panel, pull top of panel down 90 degrees and lift off.

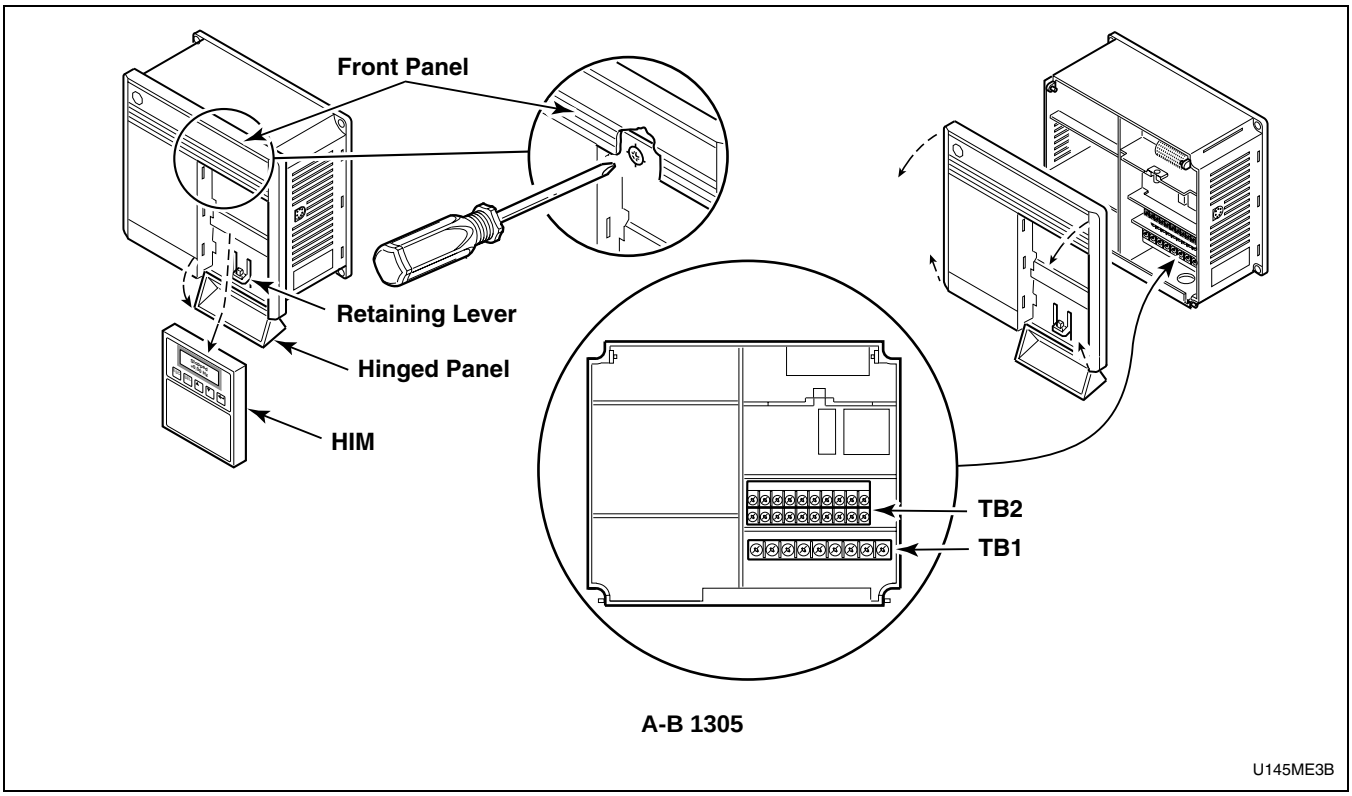

Figure 7

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

A-B 1336

To access the power and control terminal blocks, perform the following procedure:

1. Remove power from machine at main disconnect. Verify power light is off.
2. Loosen the front cover fastener located at the base of the front cover. Refer to *Figure 8*.
3. Lift off cover.

NOTE: HIM unit extension unit cable inserts into separate port for 1305 and 1336 A-B drives.

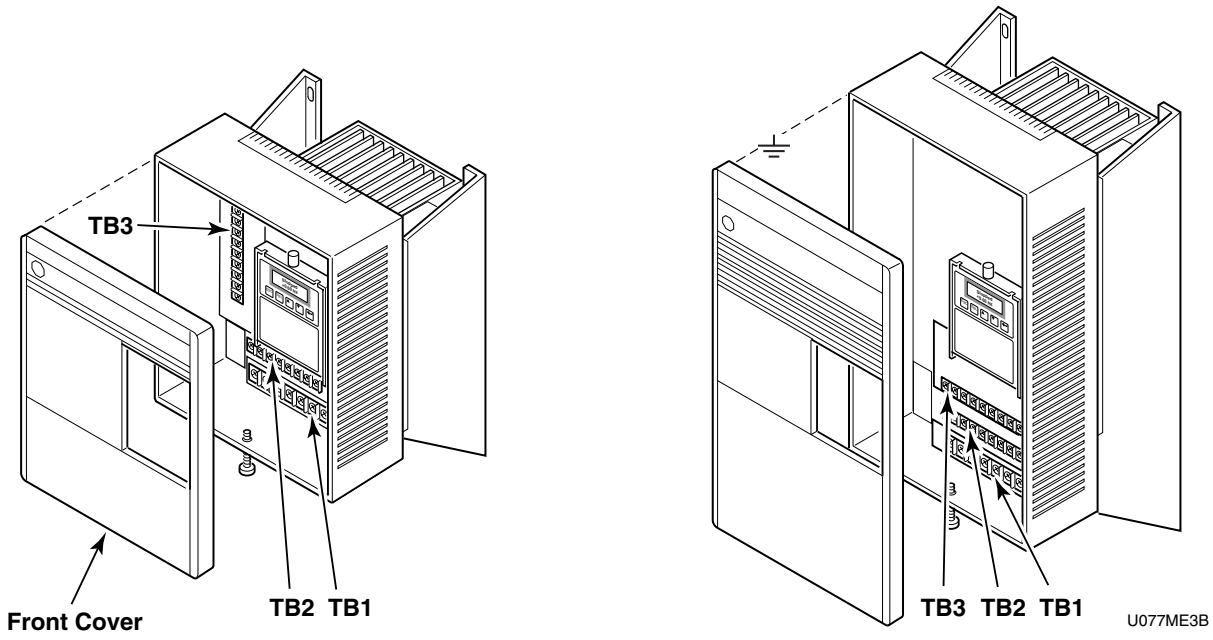

A-B 1336

Figure 8

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

PowerFlex 40

Opening the Cover

1. Press and hold in the tabs on each side of the cover. Refer to *Figure 9*.
2. Pull the cover out and up to release.

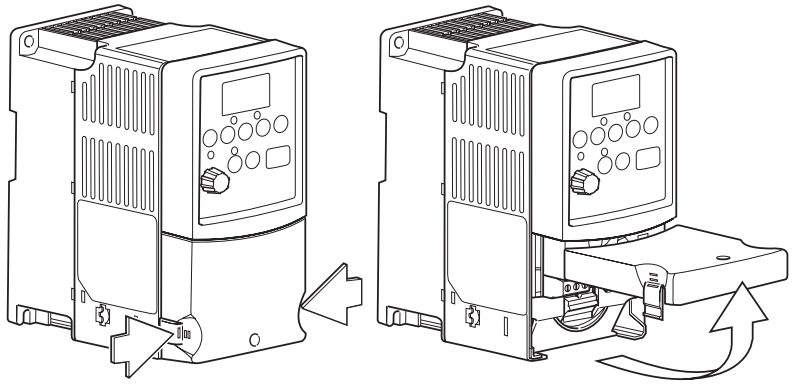

POWERFLEX 40 COVER

PHM636N

Figure 9

Power Terminal Block

The drive utilizes a finger guard over the power wiring terminals. To remove:

1. Press in and hold the locking tab.
2. Slide finger guard down and out. Refer to *Figure 10*.
3. Replace the finger guard when wiring is complete.

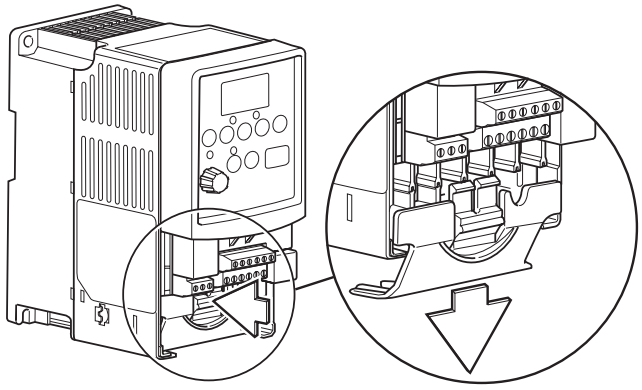

POWERFLEX 40 POWER TERMINAL BLOCK (TYPICAL)

PHM637N

Figure 10

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Power Terminal Block Description/ Torque Specifications

A-B 160

Input and output power connections are performed through two separate terminal blocks. Refer to *Figure 11*.

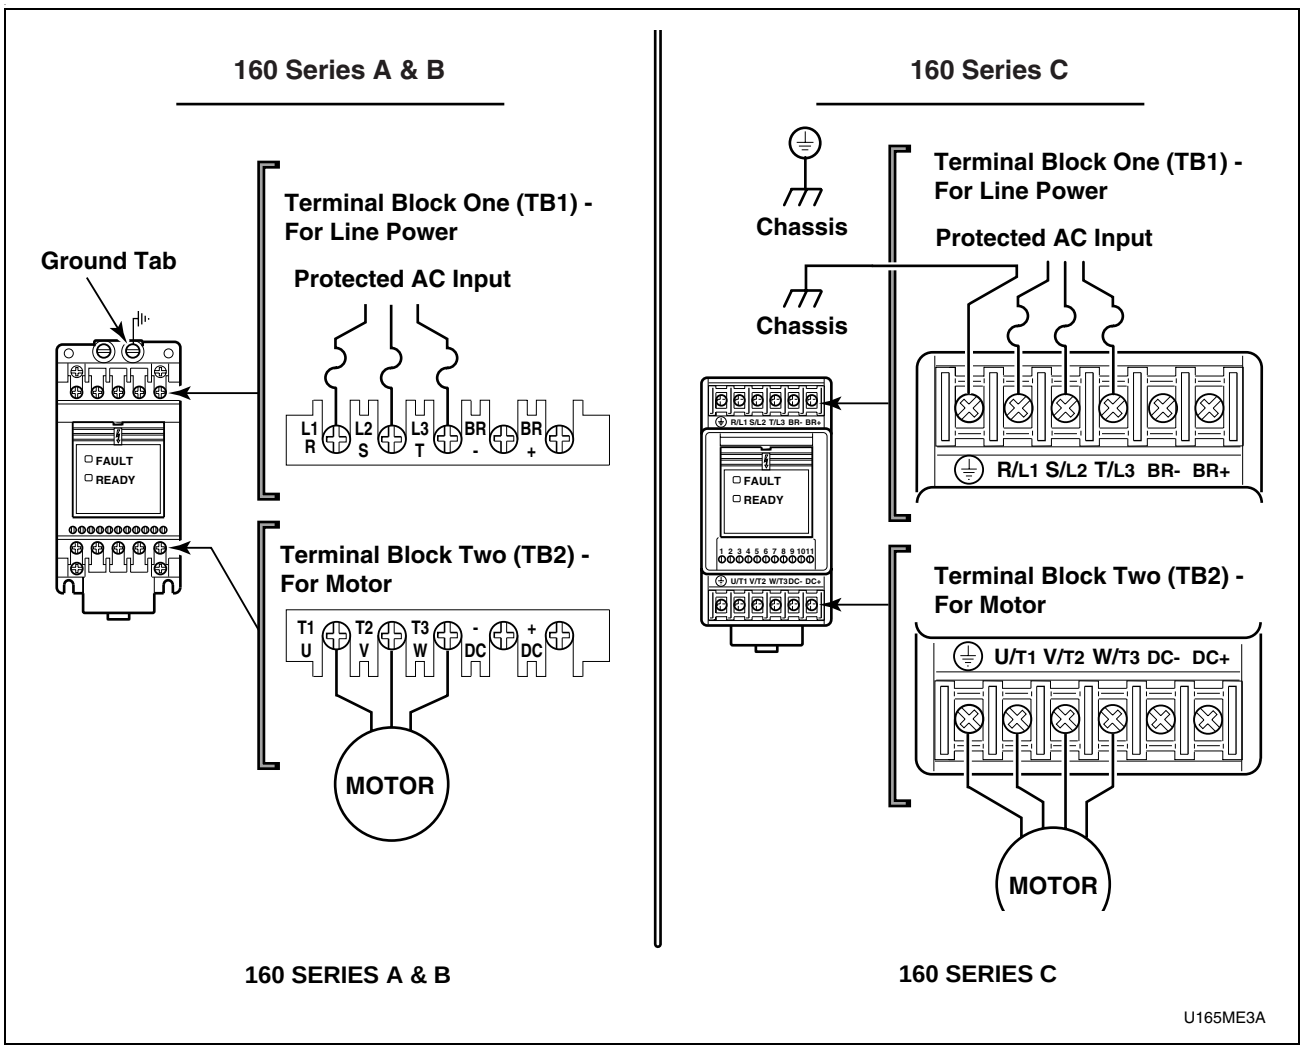

Figure 11

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

A-B 160 Power Block Terminal (TB1, TB2, GRD)

Terminals	Description
GRD	Earth Ground
R, S, T (L1, L2, L3)	AC Input Line Terminals
BR+, BR-	Dynamic Brake Resistor Option – Refer to instructions with option
DC+, DC-	Capacitor Module Option
U, V, W (T1, T2, T3)	Motor Connection

Table 3

A-B 160 Torque Specifications

Terminal	Screw Size	Max/Min Wire Size mm^2 (AWG)	Max/Min Torque N-m (lb-in)
TB1 & TB2 Series A & B	M4	4/0.75 (12/18)	1.81/1.35 (16/12)
4.0 kW (7.5 HPDP) Series C	M4	5.26 – 3.31 (10 – 12)	1.35 – 0.90 (12 – 8)
All Other Ratings Series C	M4	3.31 – 0.82 (12 – 18)	1.35 – 0.90 (12 – 8)

Table 4

A-B 1305

Input and output power connections are performed through a ten-position terminal block, TB1. Refer to *Figure 12*.

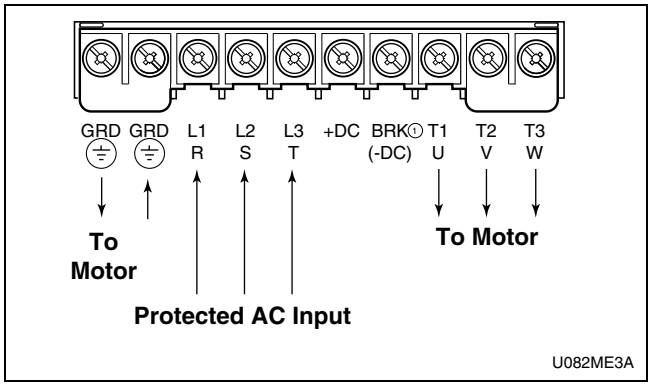

Figure 12

A-B 1305 Power Block Terminal (TB1)

Terminals	Description
GRD	Earth Ground
R, S, T (L1, L2, L3)	AC Input Line Terminals
+DC, BRK (or -DC)	Dynamic Brake Option – Refer to instructions with option
U, V, W (T1, T2, T3)	Motor Connection

Table 5

A-B 1305 Torque Specifications

Terminal	Screw Size	Max/Min Wire Size mm^2 (AWG)	Max/Min Torque N-m (lb-in)
TB1 (0.37 to 0.75 kW 1/2 to 1 HP)	M4	3.5/0.75 (12/18)	0.90 (8)
TB1 (All except above)	M4	4/0.75 (10/18)	1.81 (16)
TB2 (All)	M3.5	1.5/0.20 (14/24)	0.90 (8)

Table 6

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

A-B 1336

Input and output connections are performed through terminal block TB1. Refer to *Figures 13*, *14* and *15*.

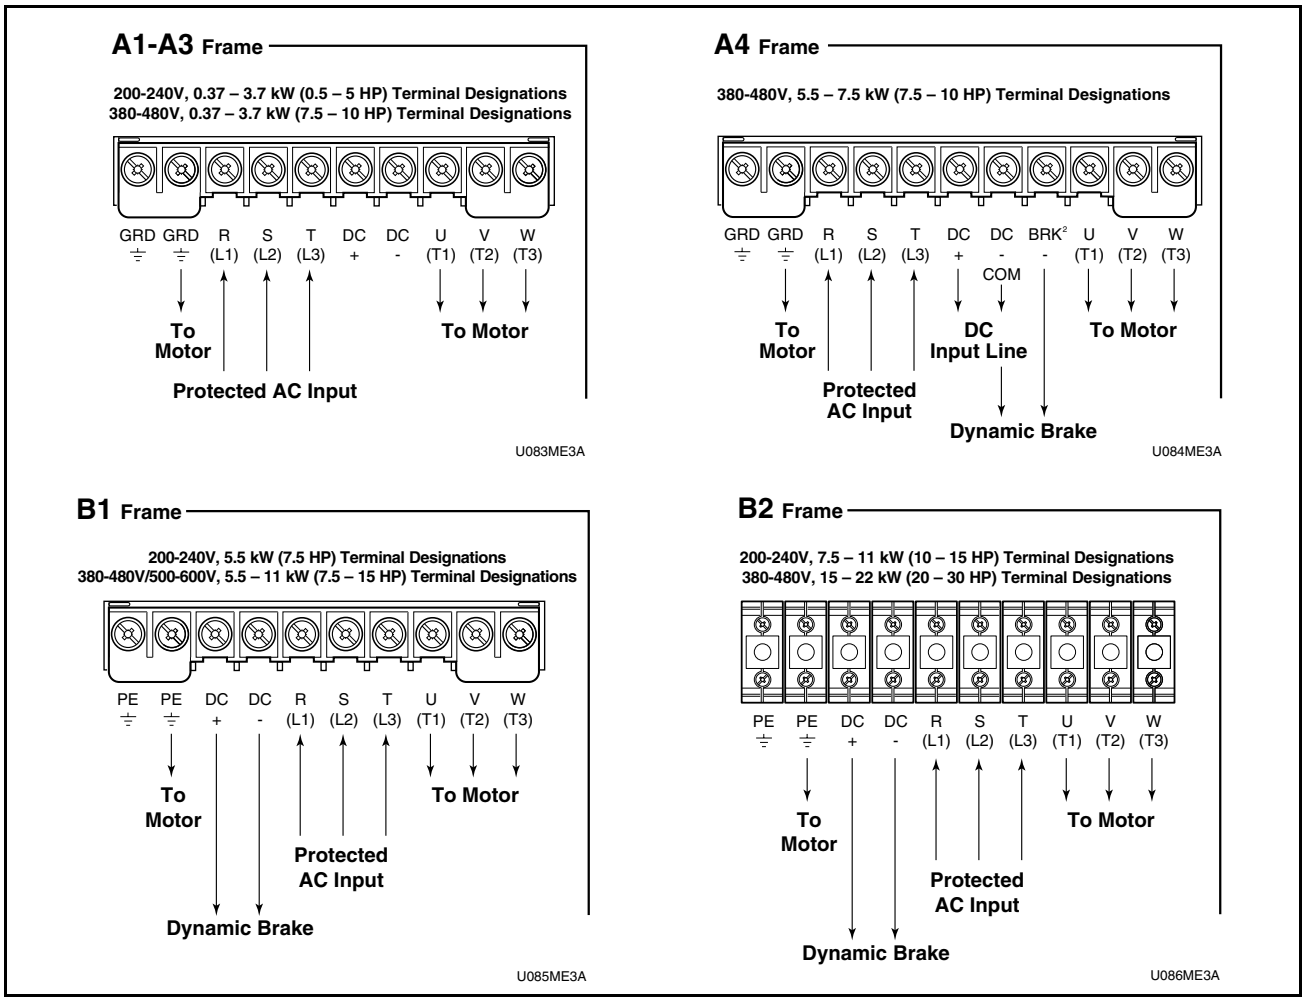
A1-A3 Frame
200-240V, 0.37 – 3.7 kW (0.5 – 5 HP) Terminal Designations
380-480V, 0.37 – 3.7 kW (7.5 – 10 HP) Terminal Designations
GRD GRD R (L1) S (L2) T (L3) DC + DC - U (T1) V (T2) W (T3)
To Motor
To Motor
Protected AC Input
U083ME3A
A4 Frame
380-480V, 5.5 – 7.5 kW (7.5 – 10 HP) Terminal Designations
GRD GRD R (L1) S (L2) T (L3) DC + DC - BRK2 - U (T1) V (T2) W (T3)
COM
To Motor
DC Input Line
To Motor
Protected AC Input
Dynamic Brake
U084ME3A
B1 Frame
200-240V, 5.5 kW (7.5 HP) Terminal Designations
380-480V/500-600V, 5.5 – 11 kW (7.5 – 15 HP) Terminal Designations
PE PE DC + DC - R (L1) S (L2) T (L3) U (T1) V (T2) W (T3)
To Motor
To Motor
Protected AC Input
Dynamic Brake
U085ME3A
B2 Frame
200-240V, 7.5 – 11 kW (10 – 15 HP) Terminal Designations
380-480V, 15 – 22 kW (20 – 30 HP) Terminal Designations
PE PE DC + DC - R (L1) S (L2) T (L3) U (T1) V (T2) W (T3)
To Motor
To Motor
Protected AC Input
Dynamic Brake
U086ME3A

Figure 13

A-B 1336
Power Block Terminal (TB1)

Terminal	Description
PE	Potential Earth Ground
R (L1), S (L2), T (L3)	AC Line Input Terminals
+DC, -DC	DC Bus Terminals
U (T1), V (T2), W (T3)	Motor Connection

Table 7

A-B 1336
Torque Specifications

Drive Frame Size	Max./Min. Wire Size* mm^2 (AWG)	Maximum Torque N-m (lb.-in.)
A1-A4	5.3/0.8 (10/18)	1.81 (16)
B1	8.4/0.8 (8/18)	1.81 (16)
B2	13.3/0.5 (6/20)	1.70 (15)

* Wire sizes given are maxium/minimum sizes that TB1 will accept – these are not recommendations.

Table 8

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

PowerFlex 40

Input and Output Power Terminals (TB1)

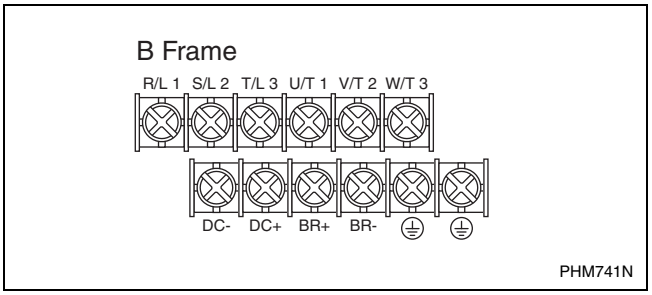

Figure 14

PowerFlex 40

Power Block Terminal (TB1)

Terminal	Description
R/L1, S/L2, T/L3	Single-phase or 3-phase Power Input
U/T1, V/T2, W/T3	3-phase Motor Output
DC-1, DC+, -DC	DC Bus Connection
⏚	Ground Connection (PE)

Table 9

PowerFlex 40

Power Terminal Block

Torque	1.7-2.2 N-m (16-19 lb-in)
Max Wire Size	5.3 mm^2 (10 AWG)
Min Wire Size	1.3 mm^2 (16 AWG)

Table 10

PowerFlex 400

Input and Output Power Terminals (TB1)

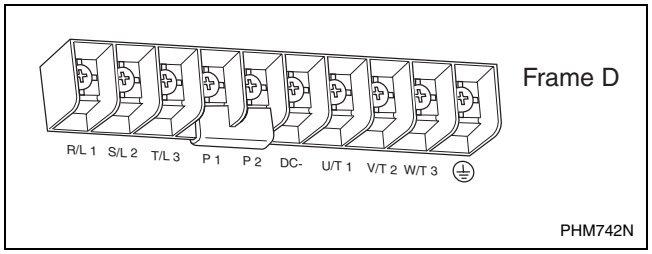

Figure 15

PowerFlex 400

PowerFlex Power Block Terminal (TBI)

Terminal	Description
R/L1, S/L2, T/L3	3-phase Power Input
U/T1, V/T2, W/T3	3-phase Motor Output
P1, P3	DC Bus inductor connection jumper or Bus inductor must be present for drive to power-up.
P2, DC-	DC Bus Connection
⏚	Ground Connection (PE)

Table 11

PowerFlex 400

Power Terminal Block

Torque	5.1N-m (45 lb-in)
Max Wire Size	33.6 mm^2 (2 AWG)
Min Wire Size	8.4 mm^2 (8 AWG)

Table 12

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Control Terminal Blocks Description/Control Logic/Torque Specifications

Control terminal functions are unique to each Allen-Bradley Drive. Each drive's control terminal is addressed independently.

A-B 160 – Control Terminal Block (TB3) Function

WARNING

To reduce risk of electric shock, severe injury or death, allow machine power to remain off for three minutes minimum prior to working in and around AC drive. Proceed with caution.

W662

CAUTION

The controller is supplied with an internal power supply. Dry contacts or open collectors are required for discrete control inputs. If an external voltage is applied, component failure could occur.

W663

Input Mode Parameter

The control terminal functions are determined in part by the Input Mode parameter #46. Changing this parameter affects the function of some terminals. All machines equipped with A-B 160 drives use Input Mode "1".

NOTE: If Input Mode is changed, power must be cycled to the drive for the change to take effect.

Speed Selection

Motor speeds are controlled by solid state or relay switch closure inputs to SW1, SW2, and SW3 in conjunction with STR and STF (direction) inputs. Refer to *Figure 16* and *Table 13*.

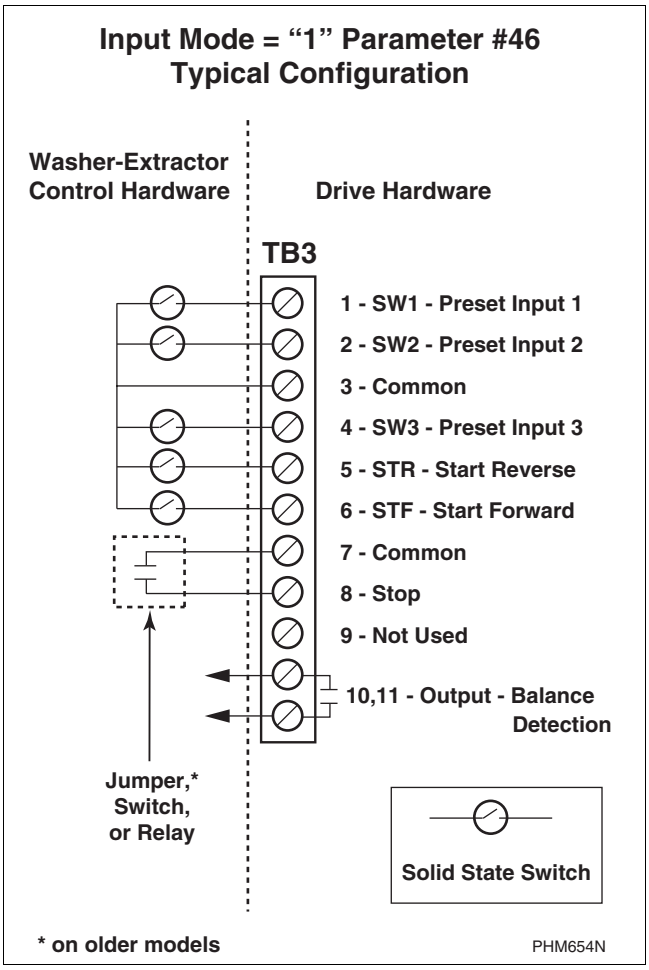
Input Mode = "1" Parameter #46
Typical Configuration
Washer-Extractor Control Hardware
Drive Hardware
TB3
1 - SW1 - Preset Input 1
2 - SW2 - Preset Input 2
3 - Common
4 - SW3 - Preset Input 3
5 - STR - Start Reverse
6 - STF - Start Forward
7 - Common
8 - Stop
9 - Not Used
10,11 - Output - Balance Detection
Jumper,* Switch, or Relay
Solid State Switch
* on older models
PHM654N

Figure 16

A-B 160 Control Terminal Block Designations

Terminal Number	Signal	Machine Use
1, 3	SW1	Preset Speed Input #1
2, 3	SW2	Preset Speed Input #2
4, 3	SW3	Preset Speed Input #3
5, 3	STR	Reverse Motion
6, 7	STF	Forward Motion
8, 7	Stop	Safety Device
9, 10	Programmable Output 1 Normally Closed	Not Used
10, 11	Programmable Output 1 Normally Open	Balance Output

Table 13

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

A-B 160 Control Logic

The following truth table (*Table 14*) designates the preset speed selection based on the inputs to the control terminals. A disconnected control terminal will seek the high signal voltage condition (greater than 10V DC).

To activate a control input (i.e., SW1, SW2, etc.), the terminal is connected to a common terminal (TB3-3 or TB3-7) to lower the signal voltage to a low condition (less than 1 Volt DC).

H – Control Voltage High Greater than 10V DC Logic 0
L – Control Voltage Low Less than 1V DC Logic 1

	SW3	SW2	SW1	STF	Stop	STR	Preset Status – Parameter 15				Input Status – Parameter 12			
DC Volt Meter Red Probe Terminal Location	4	2	1	6	8	5								
DC Volt Meter Black Probe Terminal Location	3	3	3	3	3	3								
CF & CH: V-control, EDC & A-Control PH: V-control and A-Control														
Action	**Frequency Preset Parameter #**	**Terminal #4 (SW3)**	**Terminal #2 (SW2)**	**Terminal #1 (SW1)**	**Terminal #6 (STF)**	**Terminal #8 (Stop)**	**Terminal #5 (STR)**	**N/A**	**SW3**	**SW2**	**SW1**	**N/A**	**STF**	**Stop**	**STR**
Idle	N/A	H	H	H	H	H/L	H	0	0	0	0	0	0	0/1	0
1/2 Wash Speed Forward	62	H	H	L	L	L	H	0	0	0	1	0	1	1	0
1/2 Wash Speed Reverse	62	H	H	L	H	L	L	0	0	0	1	0	0	1	1
Wash Speed Forward	63	H	L	H	L	L	H	0	0	1	0	0	1	1	0
Wash Speed Reverse	63	H	L	H	H	L	L	0	0	1	0	0	0	1	1
Distribution Speed	65	L	H	H	L	L	H	0	1	0	0	0	1	1	0
V-comp & EDC: Spin 1 Extract Terminator: Low	64	H	L	L	L	L	H	0	0	1	1	0	1	1	0
V-comp & EDC: Spin 2 Extract Terminator: Medium	67	L	L	H	L	L	H	0	1	1	0	0	1	1	0
V-comp & EDC: Spin 3 Extract Terminator: High	66	L	H	L	L	L	H	0	1	0	1	0	1	1	0
Cabinet Freestanding: WE-6 Control UW: WE-6 Control (PV) prior to January 2002															
Idle	N/A	H	H	H	H	H/L	H	0	0	0	0	0	0	0/1	0
Half-Wash Speed Forward	65	L	H	H	L	L	H	0	1	0	0	0	1	1	0
Half-Wash Speed Reverse	65	L	H	H	H	L	L	0	1	0	0	0	0	1	1
Wash Speed Forward	63	H	L	H	L	L	H	0	0	1	0	0	1	1	0
Wash Speed Reverse	63	H	L	H	H	L	L	0	0	1	0	0	0	1	1
Distribution Speed	62	H	H	L	L	L	H	0	0	0	1	0	1	1	0
Med. Extract Speed/Spray Rinse	67	L	L	H	L	L	H	0	1	1	0	0	1	1	0
High 1 Extract Speed	66	L	H	L	L	L	H	0	1	0	1	0	1	1	0
High 2 Extract Speed	64	H	L	L	L	L	H	0	0	1	1	0	1	1	0
High 3 Extract Speed	68	L	L	L	L	L	H	0	1	1	1	0	1	1	0
UW: Unilinc Control (TV) & WE-6 Control (PV) after January 2002															
Idle	N/A	H	H	H	H	H/L	H	0	0	0	0	0	0	0/1	0
Half-Wash Speed Forward	61	H	H	H	L	L	H	0	0	0	0	0	1	1	0
Half-Wash Speed Reverse	61	H	H	H	H	L	L	0	0	0	0	0	0	1	1
Wash Speed Forward	63	H	L	H	L	L	H	0	0	1	0	0	1	1	0
Wash Speed Reverse	63	H	L	H	H	L	L	0	0	1	0	0	0	1	1
Distribution Speed	62	H	H	L	L	L	H	0	0	0	1	0	1	1	0
PV: Med. Extract/Spray Rinse TV: Very Low	67	L	L	H	L	L	H	0	1	1	0	0	1	1	0
PV: High 1 Extract TV: Low	66	L	H	L	L	L	H	0	1	0	1	0	1	1	0
PV: High 2 Extract TV: Medium	64	H	L	L	L	L	H	0	0	1	1	0	1	1	0
PV: High 3 Extract (H3- Default) TV: High	68	L	L	L	L	L	H	0	1	1	1	0	1	1	0
PV: High 3 Extract (H3 Max) TV: Very High	65	L	H	H	L	L	H	0	1	0	0	0	1	1	0

Table 14

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

The Preset and Input Status displays of 1s and 0s represent the drive's display of parameters #12 and #15. These inputs can be viewed in the status display with a Program Key Module (Parameter Unit). Refer to Section 3. Parameter #15 displays the Preset Status and Parameter #12 displays the Input Status. When voltage is *high* (inactive) for an input, the status display will read "0" (Logic 0). When voltage is *low* (active) for an input, the status display will read "1" (Logic 1). *Table 14* contains the correct display value for each function. The first digit in the Preset and Input Status parameters do not correspond to a control input function.

Balance Output

The AC Drive Balance Output is transmitted to the machine controller by the closure of an on-board normally open mechanical relay shown in *Figure 16*. This action occurs at distribution speed connecting TB3-10 and TB3-11 when the drive detects an acceptable balance condition.

CAUTION

MACHINE DAMAGE AND/OR PERSONAL INJURY. Balance output terminals TB3-10 and TB3-11 should never be jumpered. This action will force the machine beyond designed tolerances.

W669

A secondary out-of-balance switch has been added to some machine models to prevent an extreme out-of-balance load from spinning. The switch opens the STOP input which disables the drive. The control inputs must be removed and reapplied to the drive for motion to resume after a STOP input has been interrupted.

A-B 160 Control Terminal (TB3) Torque Specifications

Max/Min Wire Size mm^2 (AWG)	Maximum Torque N-m (lb-in)
2.5/0.5 (14/22)	0.8/0.4 (8/4)

Table 15

A-B 1305 – Control Terminal Block (TB2) Function

WARNING

To reduce risk of electric shock, severe injury or death, allow machine power to remain off for three minutes minimum prior to working in and around AC drive. Proceed with caution.

W662

CAUTION

The controller is supplied with an internal 5V supply. Dry contacts or open collectors are required for discrete control inputs. If an external voltage is applied, component failure could occur.

W670

Input Mode Parameter

The control terminal functions are determined in part by the Input Mode parameter #21. Changing this parameter affects the function of some terminals. All machines equipped with 1305 drives use Input Mode "UNIMAC".

NOTE: If the Input Mode is changed, power must be cycled to the drive for the change to take effect.

Speed Selection

Motor speeds are controlled by solid state or mechanical switch closure inputs to SW1, SW2 and SW3 in conjunction with STR and STF (direction) inputs. Refer to *Figure 17* and *Table 16*.

Table 17 designates the preset speed selection based on the inputs to the control terminals. A disconnected control terminal will seek the high control voltage condition (approx. 5 Volts DC). To activate a control input (i.e., SW1, SW2, etc.), the terminal is connected to a common terminal (TB2-7, TB2-12, or TB2-15) to lower the control voltage to a low condition (less than 1 Volt DC).

The Input Status' display of 1s and 0s represents the drive's display of parameter #55. These inputs can be viewed in the status display with a Human Interface Module (HIM or parameter unit). Parameter #55 displays the Input Status. When voltage is high (inactive) for an input, the status display will read "0" (Logic 0). When voltage is low (active) for an input, the status display will read "1" (Logic 1).

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Table 17 contains the correct display value for each function.

The first digit in the Input Status parameter does not correspond to a control input function. Refer to *Table 17*.

NOTE: The Preset Speed logic is specific to the type of computer the machine is equipped with (i.e., WE-6 or V-Control).

Balance Output

The Balance Output is transmitted to the machine controller by the closure of a normally open mechanical relay shown in *Figure 17*. This action occurs at distribution speed connecting TB2-9 and TB2-10 when the drive detects an acceptable balance condition.

CAUTION

MACHINE DAMAGE AND/OR PERSONAL INJURY. Balance output terminals TB2-9 and TB2-10 should never be jumpered. This action will force machine beyond designated tolerances.

W664

A secondary out-of-balance switch has been added to some machine models to prevent an extreme out-of-balance load from spinning. The switch opens the Enable or STOP input which disables the drive. The control inputs must be removed and reapplied to the drive for motion to resume after a STOP or Enable input has been interrupted.

Jumpered Inputs

Carefully review electrical schematics when replacing a drive. Some machine models jumper the STOP and/or ENABLE inputs to the drive (refer to *Figure 17*).

NOTE: Verify that inputs are jumpered. Wire or metal clip jumpers may be used and can be easily overlooked during a replacement.

CAUTION

MACHINE DAMAGE AND/OR PERSONAL INJURY. Never jumper inputs if not previously configured with jumpers as identified on the applicable electrical schematic. Jumpering these inputs will override safety features.

W665

Running Status

Some machines require an output from the drive indicating the drive is running. TB2-19 and TB2-20 connect to the computer (V-Computer, EDC). The drive connects the two terminals with a solid state switch to indicate the drive is running.

Control Terminal Block Designations

Terminal Number	Signal	Typical Machine Use
1, 2, 3	External Speed Pot	Specialty Machines Only
2, 3	0 – 10V Analog Input	Specialty Machines Only
4, 3	4 – 20mA Analog Input	Specialty Machines Only
5, 3	0 – 10V Analog Output	Specialty Machines Only
6, 7	STF	Forward Motion
8, 7	Stop	Out-of-Balance Switch or Jumper
9, 10	Programmable Output 1 Normally Open	Balance Relay
11, 12	Drive Enable	Emergency Stop Disable Out-of-Balance Switch or Jumper
13, 12	STR	Reverse Motion
14, 15	Jog	Unused
16, 15	SW1	Preset Speed Input #1
17, 15	SW2	Preset Speed Input #2
18, 15	SW3	Preset Speed Input #3
19, 20	Programmable Output 2 Normally Open	Drive running output

Table 16

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

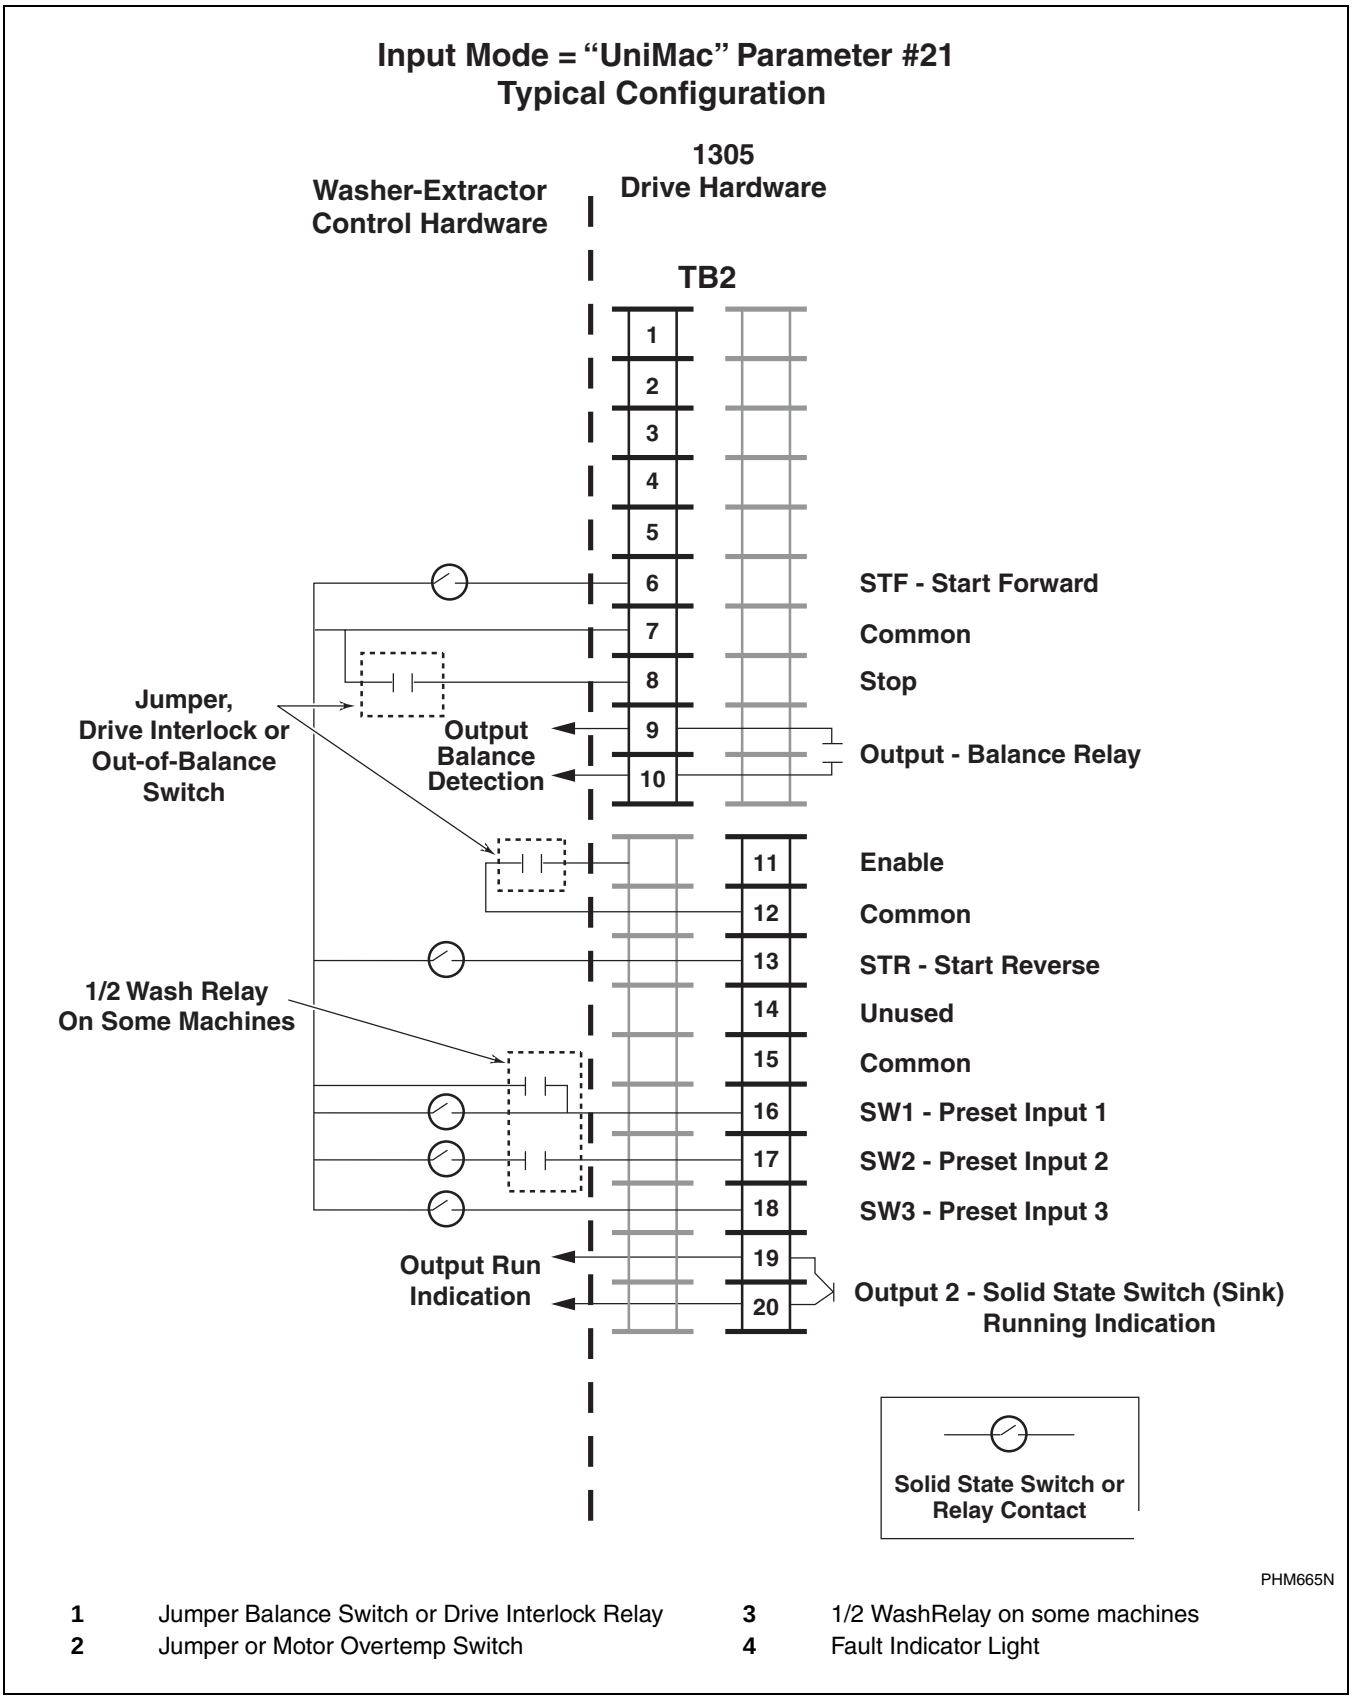

1 Jumper Balance Switch or Drive Interlock Relay
2 Jumper or Motor Overtemp Switch
3 1/2 WashRelay on some machines
4 Fault Indicator Light

Figure 17

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

A-B 1305 Control Logic

H – Control Voltage High (Approximately 5Volts DC) Logic 0 L – Control Voltage Low (Less than 1Volt DC) Logic 1																
DC Volt Meter Red Probe Terminal Location			18	17	16	13	8	6	**Input Status Parameter #55**							
DC Volt Meter Black Probe Terminal Location			7	7	7	7	7	7								
V-Control & EDC																
Action	**A-B 1305 Frequency Preset Parameter**	**Preset #**	**Preset Input/ SW3**	**Preset Input/ SW2**	**Preset Input/ SW1**	**Reverse Motion/ STR**	**Stop**	**Forward Motion/ STF**	**X**	**SW3**	**SW2**	**SW1**	**N/A**	**STR**	**Stop**	**STF**
1/2 Wash Speed Forward	27	1	H	H	L	H	L	L	x	0	0	1	0	0	1	1
1/2 Wash Speed Reverse	27	1	H	H	L	L	L	H	x	0	0	1	0	1	1	0
Wash Speed Forward	28	2	H	L	H	H	L	L	x	0	1	0	0	0	1	1
Wash Speed Reverse	28	2	H	L	H	L	L	H	x	0	1	0	0	1	1	0
Distribution	73	4	L	H	H	H	L	L	x	1	0	0	0	0	1	1
Spin 1	29	3	H	L	L	H	L	L	x	0	1	1	0	0	1	1
Spin 2	75	6	L	L	H	H	L	L	x	1	1	0	0	0	1	1
Spin 3	74	5	L	H	L	H	L	L	x	1	0	1	0	0	1	1
WE-6 Control																
Half-Wash Speed Forward	73	4	L	H	H	H	L	L	x	1	0	0	0	0	1	1
Half-Wash Speed Reverse	73	4	L	H	H	L	L	H	x	1	0	0	0	1	1	0
Wash Speed Forward	28	2	H	L	H	H	L	L	x	0	1	0	0	0	1	1
Wash Speed Reverse	28	2	H	L	H	L	L	H	x	0	1	0	0	1	1	0
Distribution	27	1	H	H	L	H	L	L	x	0	0	1	0	0	1	1
Medium Spin	75	6	L	L	H	H	L	L	x	1	1	0	0	0	1	1
High Spin 1	74	5	L	H	L	H	L	L	x	1	0	1	0	0	1	1
High Spin 2	29	3	H	L	L	H	L	L	x	0	1	1	0	0	1	1
High Spin 3	76	7	L	L	L	H	L	L	x	1	1	1	0	0	1	1

Table 17

Control Terminal (TB2) Torque Specifications

Max/Min Wire Size mm^2 AWG	Maximum Torque N-m (lb-in)
1.5/0.20 (14/24)	0.90 (8)

Table 18

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

A-B 1336 Control Terminal (TB2/TB3) Function

WARNING

To reduce risk of electric shock, severe injury or death, allow machine power to remain off for three minutes minimum prior to working in and around AC drive. Proceed with caution.

W662

WARNING

The controller is supplied with an internal 5V supply. Dry contacts or open collectors are required for discrete control inputs. If an external voltage is applied, component failure could occur.

W670

NOTE: Do not connect drive common terminals (TB2 or TB3) to ground. There must be no ground potential difference between source and drive.

Input Mode Parameter

The control terminal functions are determined in part by the Input Mode parameter #21. Changing this parameter affects the function of some terminals. All machines equipped with A-B 1336 drives use Input Mode “12”.

NOTE: If the Input Mode is changed, power must be cycled to the drive for the change to take effect.

Speed Selection

Motor speeds are controlled by solid state or mechanical switch closure inputs to SW1, SW2, and SW3 in conjunction with STR and STF (direction) inputs. Refer to *Figure 18* and *Table 19*.

Table 21 designates the preset speed selection based on the inputs to the control terminals. A disconnected control terminal will seek the high control voltage condition (approx. 5 Volts DC). To activate a control input (i.e., SW1, SW2, etc.), the terminal is connected to a common terminal (TB3-21, TB3-25, or TB3-29) to lower the control voltage to a low condition (less than 1 Volt DC).

The Input Status’ display of 1s and 0s represents the drive’s display of parameter #55. These inputs can be viewed in the status display with a Human Interface Module (HIM or parameter unit). Parameter #55 displays the Input Status. When voltage is *high* (inactive) for an input, the status display will read “0” (Logic 0). When voltage is *low* (active) for an input, the status display will read “1” (Logic 1).
Table 21 contains the correct display value for each function. The sixth display digit from the left in Input Status parameter does not correspond to a control input function. Refer to *Table 21*.

NOTE: The Preset Speed logic is specific to the type of computer the machine is equipped with (i.e., WE-6 or V-Computer).

Balance Output

The AC drive Balance Output is transmitted to the machine controller by the closure of an on-board normally open mechanical relay shown in *Figure 18*. This action occurs at distribution speed connecting TB3-16 and TB3-17 when the drive detects an acceptable balance condition.

CAUTION

MACHINE DAMAGE AND/OR PERSONAL INJURY. Balance output terminals TB2-16 and TB2-17 should never be jumpered. This action will force machine beyond designed tolerances.

W666

Stop Input (Door Interlock /Out-of-Balance Switch)

The Stop Input function is machine dependent. The input is used in some machines to disable the drive in case of an excessive out-of-balance condition; in others, the input is used to disable the drive when the door is open. Refer to the applicable electrical schematic to see the correct wiring of this input. The control inputs must be removed and reapplied to the drive for motion after a STOP input has been interrupted.

Jumpered Inputs

Carefully review electrical schematics when replacing a drive. Some machine models jumper the STOP, Motor Temp Input, and/or ENABLE inputs to the drive (refer to *Figure 18*).

NOTE: Wire or metal clip jumpers may be used and can be easily overlooked during a replacement.

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

CAUTION

MACHINE DAMAGE AND/OR PERSONAL INJURY. Never jumper inputs if not previously configured with jumpers as identified on the applicable electrical schematic. Jumpering these inputs will override safety features.

W665

Motor Thermal Protection

On some machines the motor is equipped with a thermal protection switch. Switch inputs are placed between TB3-24 and TB3-25. If an over-temp occurs, the switch is opened triggering a drive fault indicator light to illuminate. If no thermal switch is present, the connections are jumpered. This input can be viewed in the Input Status parameter. For normal operation, logic input for “Motor Temp” remains “1”. If the logic input is “0”, a jumper is missing or an over-temp condition exists with the motor.

Fault Indicator Light

The A-B 1336 is equipped with a mechanical relay which transitions when a drive fault occurs. Some machines use this contact for lighting an external indicator light. This relay is used to switch the neutral (AC common) lead to the fault indictor light and connects between TB3-13 and TB3-14. Refer to *Figure 18*.

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

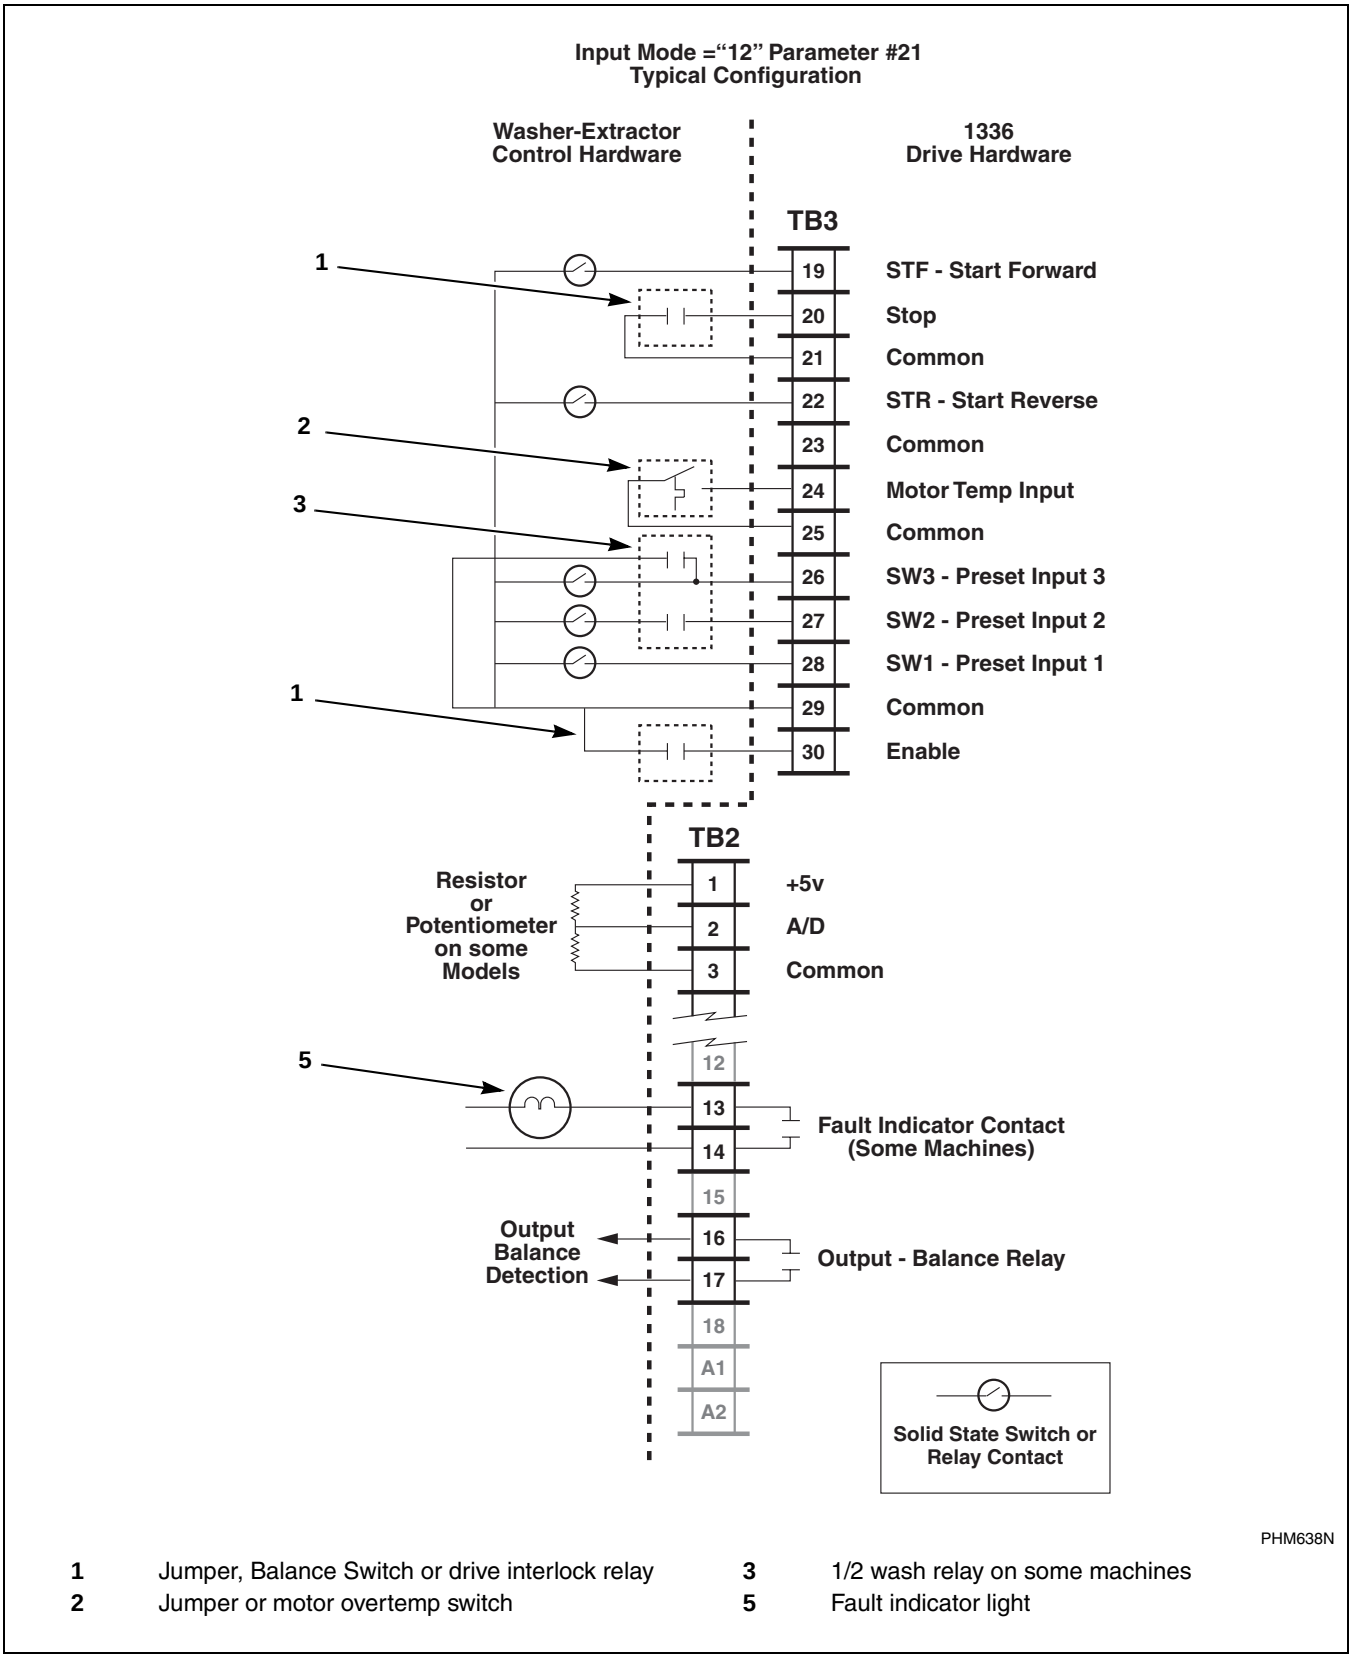

1	Jumper, Balance Switch or drive interlock relay	**3**	1/2 wash relay on some machines
2	Jumper or motor overtemp switch	**5**	Fault indicator light

Figure 18

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

A-B 1337 Control Terminal Block Designations

Terminal Number	Signal	Machine Use
TE	True Earth	Not Used
1, 2, 3	External Speed Pot	Select Machines Only
4	Signal Common	Specialty Machines Only
5	0 – 10V DC Input	Specialty Machines Only
6	4 – 20 mA Input	Specialty Machines Only
7, 8	Pulse Input for Frequency	Specialty Machines Only
9	Analog Output	Not Used
10, 11	Programmable Contact	Not Used
11, 12	Run Contact	Not Used
13, 14	Fault Contact NO	Fault Indicator Light (Some Machines)
14, 15	Fault Contact NC	Not Used
16, 17	Alarm Contact NO	Balance Relay
17, 18	Alarm Contact NC	Not Used
A1, A2	Future Use	Not Used
19, 29	STF	Forward Motion
20, 21	Stop	Drive Balance Switch Interlock Relay or Jumper
21	Common	
22, 29	STR	Reverse Motion
23, 21	Input	Not Used
24, 25	Input	Motor Thermal Switch (Some Machines)
25	Common	
28, 29	SW1	Preset Speed Input #1
27, 29	SW2	Preset Speed Input #2
26, 29	SW3	Preset Speed Input #3
29	Common	
30, 29	Enable	Balance Switch, Drive Interlock or Jumper

Table 19

A-B 1336 Torque Specifications

Max/Min Wire Size mm^2 (AWG)	Maximum Torque N-m (lb-in)
2.1/0.3 (14/22)	1.36 (12)

Table 20

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

A-B 1336-Series Drive Control Logic

H – Signal Voltage High (Approx. 5V DC) Logic 0
L – Signal Voltage Low (less than 1vdc) Logic 1

		SW2	SW1	SW3	STR	Stop	STF	Input Status – Parameter #55							
DC Volt Meter Red Probe Terminal Location		27	28	26	22	20	19								
DC Volt Meter Black Probe Terminal Location		29	29	29	29	29	29								
Cabinet Freestanding & UW: V-Control Cabinet Hardmount: V-Control															
Action	**Frequency Preset Parameter #**	**Terminal #27 (SW2)**	**Terminal #28 (SW1)**	**Terminal #26 (SW3)**	**Terminal #22 (STR)**	**Terminal #20 (Stop)**	**Terminal #19 (STF)**	**SW2**	**SW1**	**SW3**	**MTR TEMP**	**STR**	**N/A**	**Stop**	**STF**
Idle	N/A	H	H	H	H	H/L	H	0	0	0	1	0	0	0/1	0
1/2 Wash Speed Forward	73	H	H	L	H	L	L	0	0	1	1	0	0	1	1
1/2 Wash Speed Reverse	73	H	H	L	L	L	H	0	0	1	1	1	0	1	0
Wash Speed Forward	28	L	H	H	H	L	L	1	0	0	1	0	0	1	1
Wash Speed Reverse	28	L	H	H	L	L	H	1	0	0	1	1	0	1	0
Distribution Speed	27	H	L	H	H	L	L	0	1	0	1	0	0	1	1
V-Control & EDC: Spin 1 Extract Terminator: Low	75	L	H	L	H	L	L	1	0	1	1	0	0	1	1
V-Control & EDC: Spin 2 Extract Terminator: Medium	29	L	L	H	H	L	L	1	1	0	1	0	0	1	1
V-Control & EDC: Spin 3 Extract Terminator: High	74	H	L	L	H	L	L	0	1	1	1	0	0	1	1
Cabinet Freestanding: WE-6 Control (PV) UW: WE-6 Control (PV) prior to January 2002															
Idle	N/A	H	H	H	H	H/L	H	0	0	0	1	0	0	0/1	0
Half-Wash Speed Forward	65	H	H	L	H	L	L	0	0	1	1	0	0	1	1
Half-Wash Speed Reverse	65	H	H	L	L	L	H	0	0	1	1	1	0	1	0
Wash Speed Forward	63	L	H	H	H	L	L	1	0	0	1	0	0	1	0
Wash Speed Reverse	63	L	H	H	L	L	H	1	0	0	1	1	0	1	0
Distribution Speed	62	H	L	H	H	L	L	0	1	0	1	0	0	1	1
Med. Extract Speed/Spray Rinse	67	L	H	L	H	L	L	1	0	1	1	0	0	1	1
High 1 Extract Speed	66	H	L	L	H	L	L	0	1	1	1	0	0	1	1
High 2 Extract Speed	64	L	L	H	H	L	L	1	1	0	1	0	0	1	1
High 3 Extract Speed	68	L	L	L	H	L	L	1	1	1	1	0	0	1	1
UW: Unilinc Control (TV) & WE-6 Control(PV) after January 2002															
Idle	N/A	H	H	H	H	H/L	H	0	0	0	1	0	0	0/1	0
Half-Wash Speed Forward	61	H	H	H	H	L	L	0	0	0	1	0	0	1	1
Half-Wash Speed Reverse	61	H	H	H	L	L	H	0	0	0	1	1	0	1	0
Wash Speed Forward	63	L	H	H	H	L	L	1	0	0	1	0	0	1	1
Wash Speed Reverse	63	L	H	H	L	L	H	1	0	0	1	1	0	1	0
Distribution Speed	62	H	L	H	H	L	L	0	1	0	1	0	0	1	1
PV: Med. Extract/Spray Rinse TV: Very Low	67	L	H	L	H	L	L	1	0	1	1	0	0	1	1
PV: High 1 Extract TV: Low	66	H	L	L	H	L	L	0	1	1	1	0	0	1	1
PV: High 2 Extract TV: Medium	64	L	L	H	H	L	L	1	1	0	1	0	0	1	1
PV: High 3 Extract (H3- Default) TV: High	68	L	L	L	H	L	L	1	1	1	1	0	0	1	1
PV: High 3 Extract (H3 Max) TV: Very High	65	H	H	L	H	L	L	0	0	1	1	0	0	1	1

Table 21

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

A-B PowerFlex 40/400 Control Terminal Function

WARNING

To reduce risk of electric shock, severe injury or death, allow machine power to remain off for three minutes minimum prior to working in and around AC drive. Proceed with caution.

W662

NOTE: Do not connect AC drive digital common, analog common, or opto common terminals to chassis ground.

Input Mode Parameter

The control terminal functions are determined in part by the "Start Source" parameter #36. Changing this parameter affects the function of some terminals. All machines currently equipped with PowerFlex drives should be set to use selection #2 Two-Wire Start Source.

Speed Selection

Motor speeds are controlled by solid state or mechanical switch closure inputs to Digital In 1, Digital In 2, and Digital In 3 terminals. Similarly, motor rotation direction is controlled by inputs to Start/Run FWD and Direction/Run REV terminals. Refer to *Figure 19*.

An inactive control input terminal (H) will measure approximately 24v DC while an active control input terminal (L) will measure less than 1v DC. When a control input (i.e., Digital In 1, 2 , 3, 4, Fwd, Rev, or Stop) is connected to a common terminal (terminal 4), the voltage on the control input terminal is reduced to near zero and the input is activated.

Table 23 designates the speed and rotation direction based on inputs to the control terminals. The AC drive's input status parameters display of 1s and 0s at various machine actions can be viewed using a Human Interface Module (HIM or parameter unit) while monitoring parameter #13 and/or #14. When the control input terminal voltage is high (inactive) the status display will read "0" (logic 0). When the control input terminal voltage is low (active) the status will read "1" (logic 1).

Balance Output

The AC drive balance output signal is transmitted to the machine controller by the operation of an on-board normally open relay or transistor. Refer to *Figure 19*. The AC drive will analyze the wash load distribution during certain drain steps and communicate the severity of load imbalance to the machine controller. The machine controller then determines if the load is suitably distributed for the programmed spin speed. The severity of load imbalance is communicated digitally by the on-board relay or transistor using a series of pulses or continuous open or closed state.

CAUTION

Never permanently jumper the AC drive balance output terminals or short the wires in these terminals together. This will override the balance detection routine and cause the wash cycle to abort, potentially causing machine damage or personal injury in the process.

W671

Stop/Enable Input

The Stop Input function is machine dependent. The input is typically used to disable the drive either when the frame vibration safety limit switch has been tripped or when the loading door has been opened. Refer to the applicable machine electrical schematic for details on the connection of this input. When the Stop Input signal is interrupted, the control input signals must be removed and reapplied to restart the motor operation.

Sink/Source Switch

The PowerFlex series of drives include a DIP switch that will allow the drive input signals to be wired as "sink" or "source". This switch should be set to the sink mode on all Alliance Laundry Equipment made at the time of this publication. Setting this switch in the source mode will cause the drive to not operate and be mistaken as a failed drive.

Fault Code Display

Refer to Fault Display and Troubleshooting Information.

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

PowerFlex 40 Control Terminal Block Designations

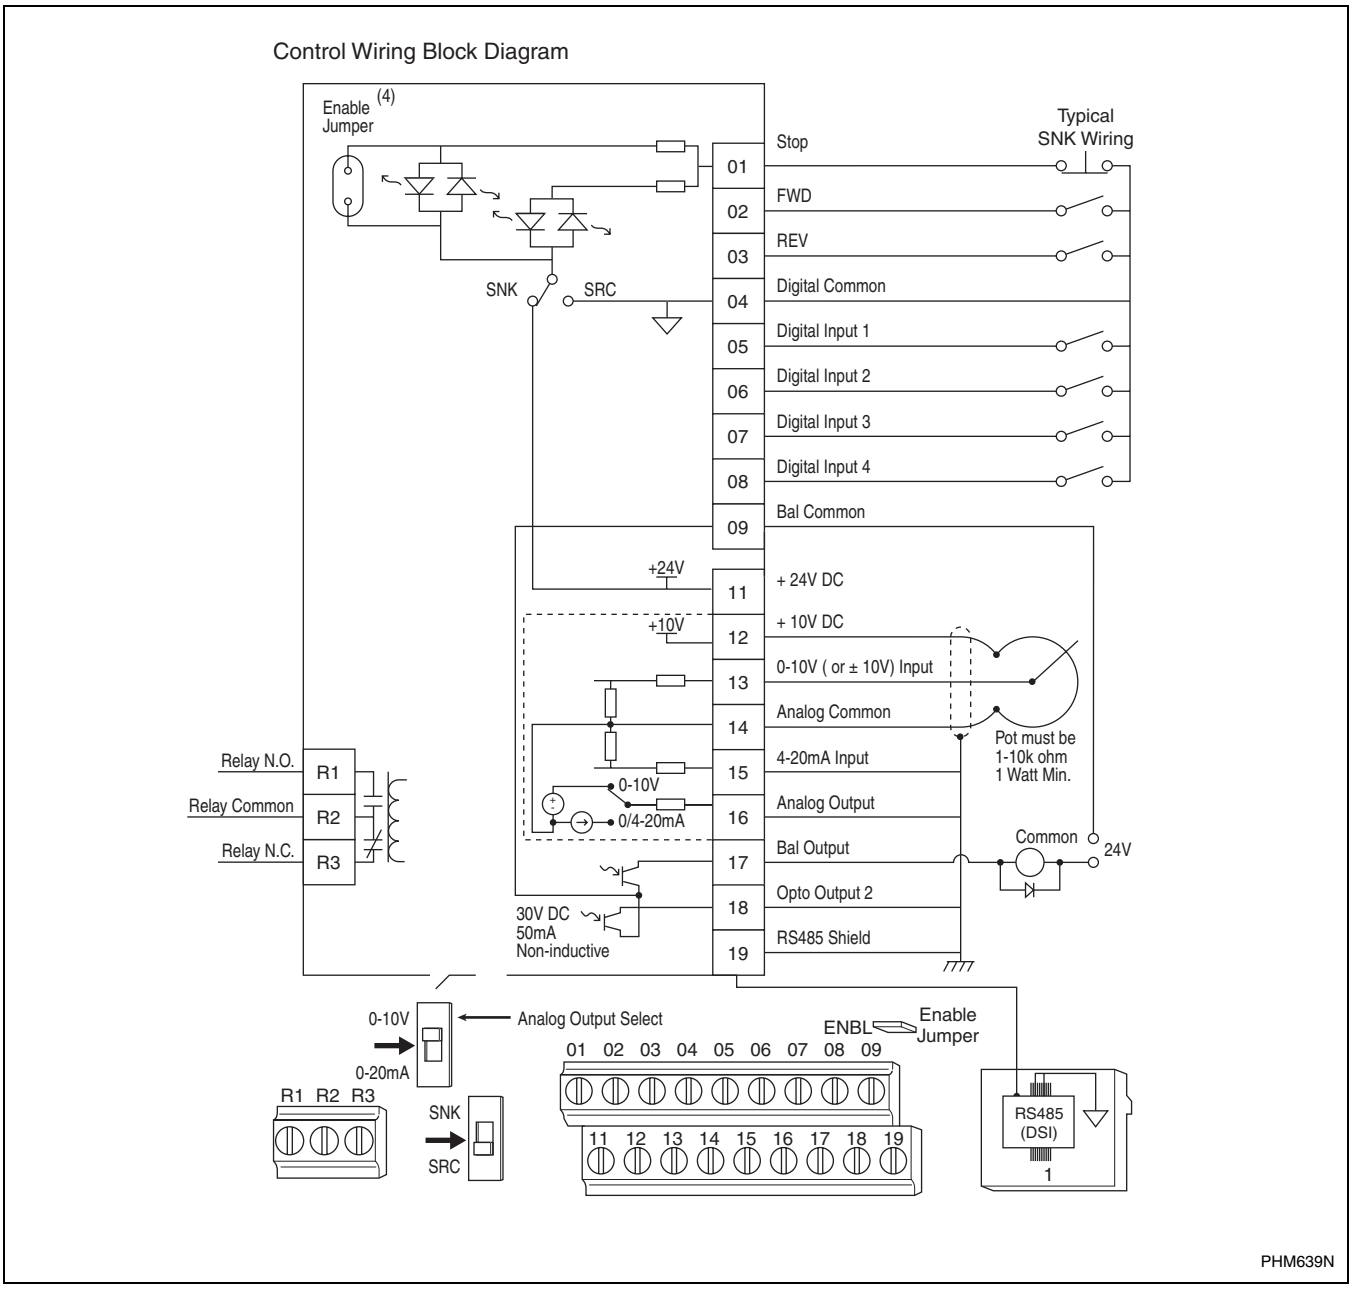

Figure 19

Control Input/Output Terminal Block

Torque	0.5-0.8 N-m (4.4-7.0 lb-in)
Max Wire Size	1.3 mm^2 (16 AWG)
Min Wire Size	0.13 mm^2 (26 AWG)

Table 22

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

PowerFlex 400 Control Terminal Block Designations

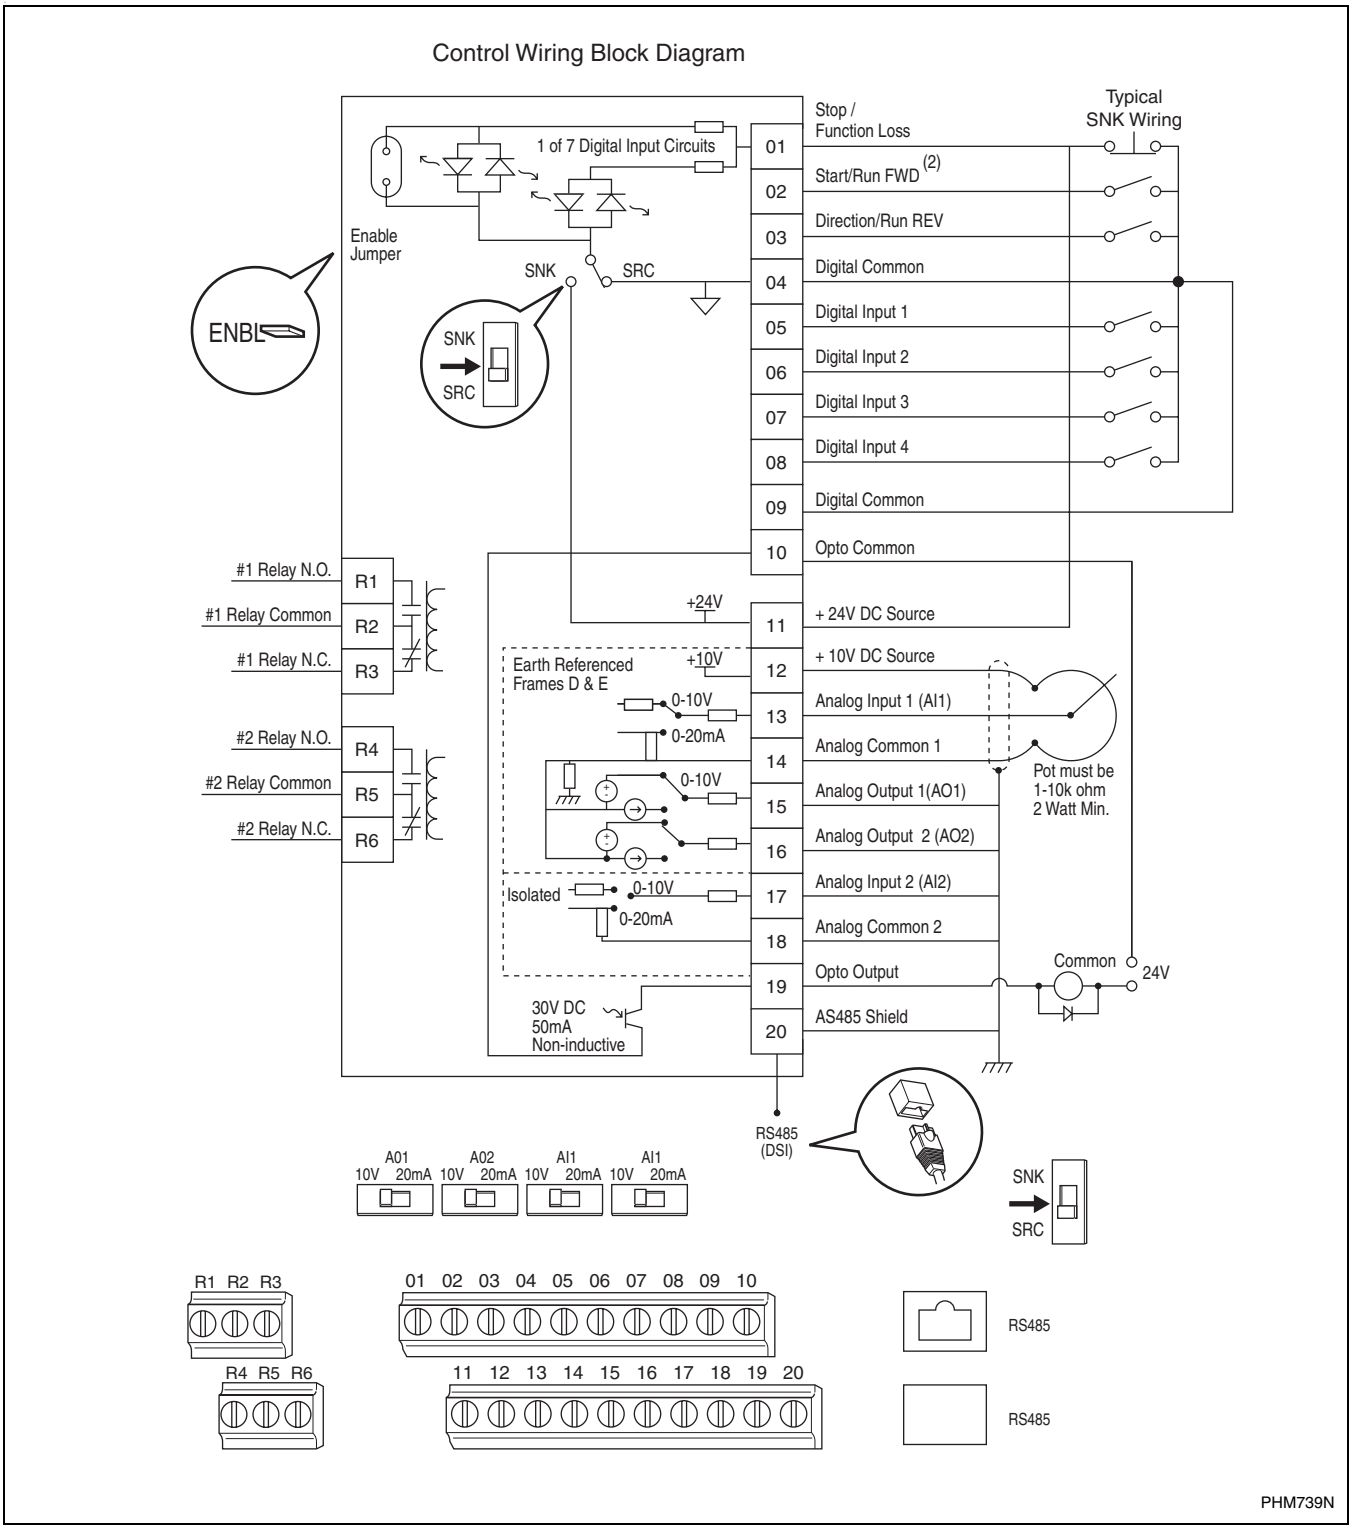

Figure 20

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

PowerFlex 40 Drive Control Logic

H – Signal Voltage High (approximately 24V DC)Logic 0
L – Signal Voltage Low (less than 1V DC) Logic 1

		Digital In 3	Digital In 2	Ditital In 1	Fwd	Stop	Rev	Digital Input Status – Parameter 14				Control Input Status – Parameter 13			
DC Volt Meter Red Probe Terminal Location		7	6	5	2	1	3								
DC Volt Meter Black Probe Terminal Location		4	4	4	4	4	4								
Cabinet Hardmount: A-Control, B-Control UW: A-Control															
Action	**Frequency Preset Parameter #**	**Terminal #7 (SW3)**	**Terminal #6 (SW2)**	**Terminal #5 (SW1)**	**Terminal #2 (STF)**	**Terminal #1 (Stop)**	**Terminal #3 (STR)**	***Digital In 4**	**Digital In 3**	**Digital In 2**	**Digital In 1**	**DB Trans On**	**Stop**	**Rev (STR)**	**Fwd (STF)**
Idle	N/A	H	H	H	H	L	H	0	0	0	0	0	0/1	0	0
1/2 Wash Speed Forward	71	H	H	L	L	L	H	1	0	0	1	0	1	0	1
1/2 Wash Speed Reverse	71	H	H	L	H	L	L	0	0	0	1	0	1	1	0
Wash Speed Forward	72	H	L	H	L	L	H	1	0	1	0	0	1	0	1
Wash Speed Reverse	72	H	L	H	H	L	L	0	0	1	0	0	1	1	0
Distribution Speed	74	L	H	H	L	L	H	1	1	0	0	0	1	0	1
V-Control & EDC: Spin 1 Extract Terminator: Low	73	H	L	L	L	L	H	1	0	1	1	0	1	0	1
V-Control & EDC: Spin 2 Extract Terminator: Medium	76	L	L	H	L	L	H	1	1	1	0	0	1	0	1
V-Control & EDC: Spin 3 Extract Terminator: High	75	L	H	L	L	L	H	1	1	0	1	0	1	0	1
UW: Unilinc Control (TV) & WE-6 Control (PV)															
Idle	N/A	H	H	H	H	L	H	0	0	0	0	0	0/1	0	0
Half-Wash Speed Forward	70	H	H	H	L	L	H	1	0	0	0	0	1	0	1
Half-Wash Speed Reverse	70	H	H	H	H	L	L	0	0	0	0	0	1	1	0
Wash Speed Forward	72	H	L	H	L	L	H	1	0	1	0	0	1	0	1
Wash Speed Reverse	72	H	L	H	H	L	L	0	0	1	0	0	1	1	0
Distribution Speed	71	H	H	L	L	L	H	1	0	0	1	0	1	0	1
PV: Med. Extract/Spray Rinse TV: Very Low	76	L	L	H	L	L	H	1	1	1	0	0	1	0	1
PV: High 1 Extract TV: Low	75	L	H	L	L	L	H	1	1	0	1	0	1	0	1
PV: High 2 Extract TV: Medium	73	H	L	L	L	L	H	1	0	1	1	0	1	0	1
PV: High 3 Extract (H3- Default) TV: High	77	L	L	L	L	L	H	1	1	1	1	0	1	0	1
PV: High 3 Extract (H3- Max) TV: Very High	74	L	H	H	L	L	H	1	1	0	0	0	1	0	1

* Digital In 4 is wired to the Forward Input terminal #2 and will be “on” whenever the drive receives a forward command.

Table 23

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

PowerFlex 400 Drive Control Logic

H – Signal Voltage High (approximately 24V DC)Logic 0
L – Signal Voltage Low (less than 1V DC) Logic 1

		Digital In 3	Digital In 2	Ditital In 1	Fwd	Stop	Rev	Control Input Status Parameter 302							
DC Volt Meter Red Probe Terminal Location		7	6	5	2	1	3								
DC Volt Meter Black Probe Terminal Location		4	4	4	4	4	4								
Action	**Frequency Preset Parameter #**	**Terminal #7 (SW3)**	**Terminal #6 (SW2)**	**Terminal #5 (SW1)**	**Terminal #2 (STF)**	**Terminal #1 (Stop)**	**Terminal #3 (STR)**	**Not Used**	***Digital In 4**	**Digital In 3**	**Digital In 2**	**Digital In 1**	**Stop**	**Rev (STR)**	**Fwd (STF)**
Cabinet Freestanding: WE-6 Control (PV)															
Idle	N/A	H	H	H	H	L	H	0	0	0	0	0	0/1	0	0
Half-Wash Speed Forward	355	L	H	H	L	L	H	0	1	1	0	0	1	0	1
Half-Wash Speed Reverse	355	L	H	H	H	L	L	0	0	1	0	0	1	1	0
Wash Speed Forward	145	H	L	H	L	L	H	0	1	0	1	0	1	0	1
Wash Speed Reverse	145	H	L	H	H	L	L	0	0	0	1	0	1	1	0
Distribution Speed	144	H	H	L	L	L	H	0	1	0	0	1	1	0	1
Med. Extract	357	L	L	H	L	L	H	0	1	1	1	0	1	0	1
High 1 Extract	356	L	H	L	L	L	H	0	1	1	0	1	1	0	1
High 2 Extract	146	H	L	L	L	L	H	0	1	0	1	1	1	0	1
High 3 Extract (H3- Default)	358	L	L	L	L	L	H	0	1	1	1	1	1	0	1
High 3 Extract (H3- Max)	355	L	H	H	L	L	H	0	1	1	0	0	1	0	1

* Digital In 4 is wired to the Forward Input terminal #2 and will be “on” whenever the drive receives a forward command.

Table 24

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Computer Output Boards

Figures 21, 22, and *24* show the output boards of the four controls available. Connections identified on these figures set speed and direction of the drive.

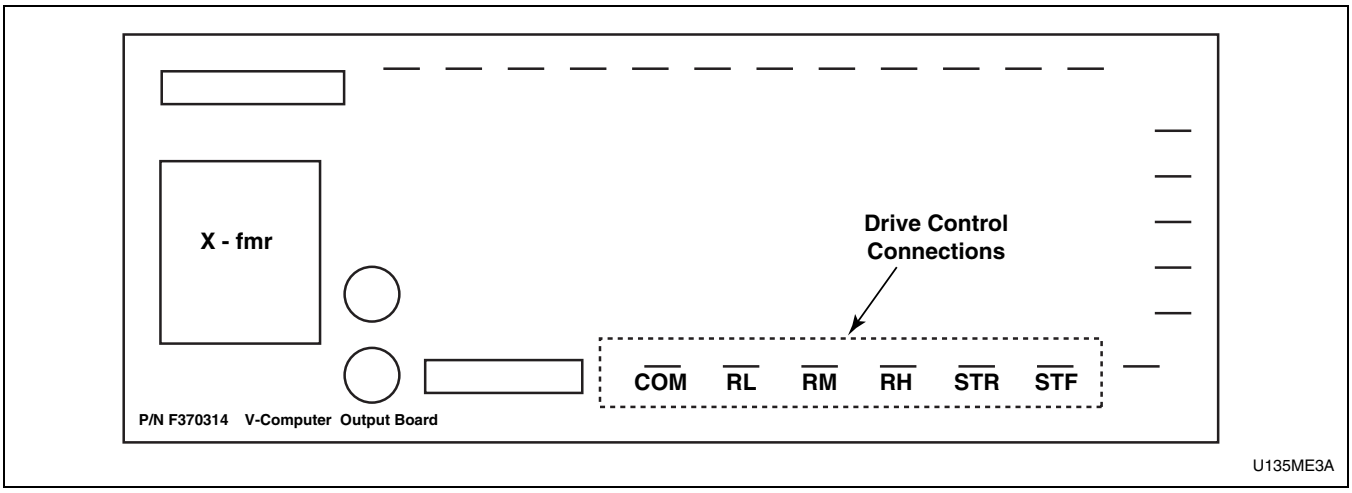

Figure 21

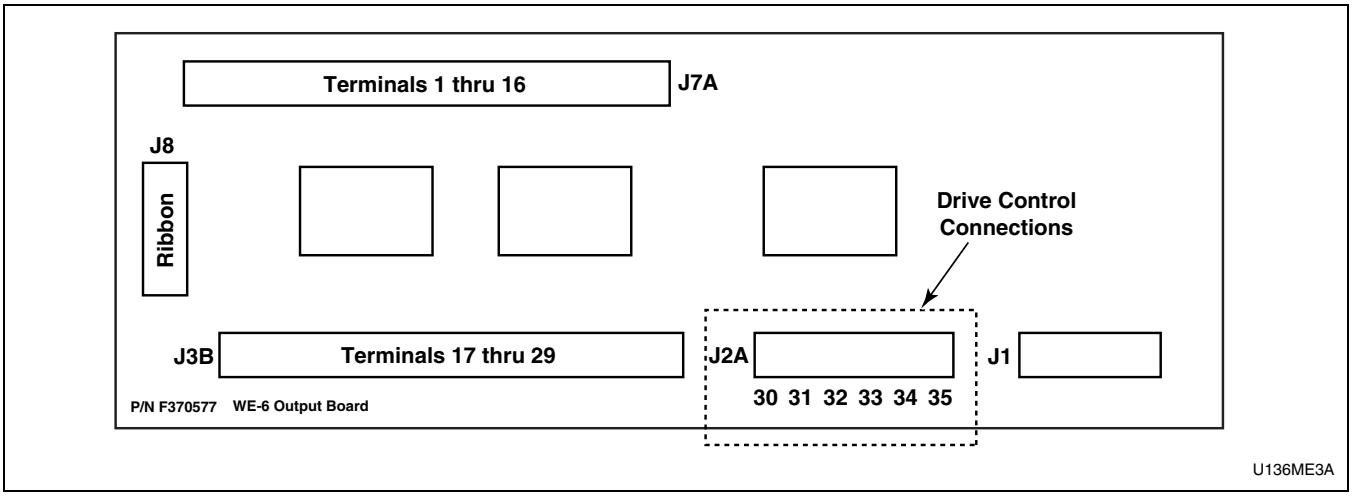

Figure 22

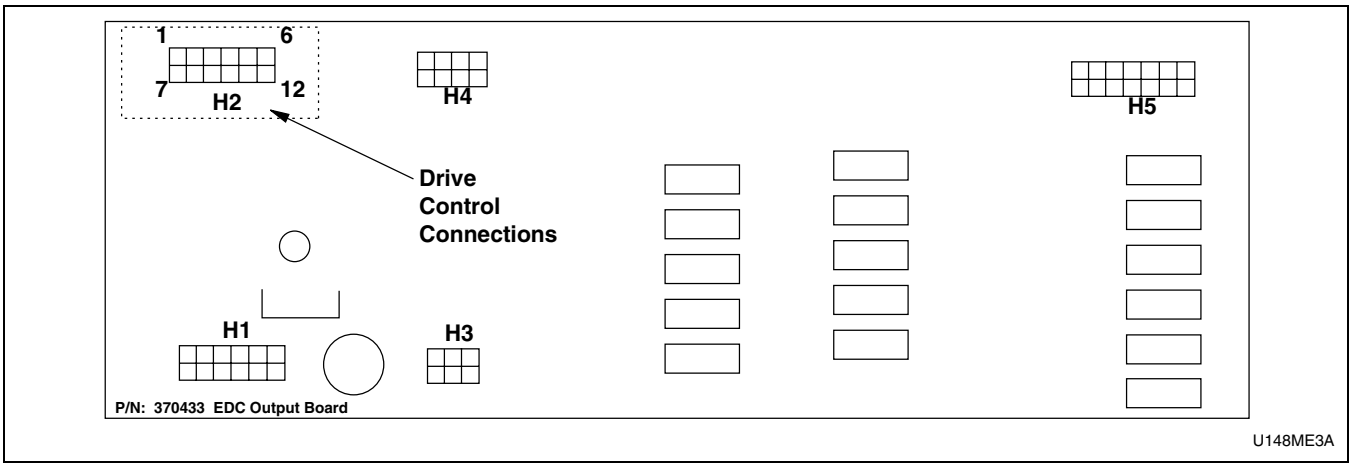

Figure 23

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

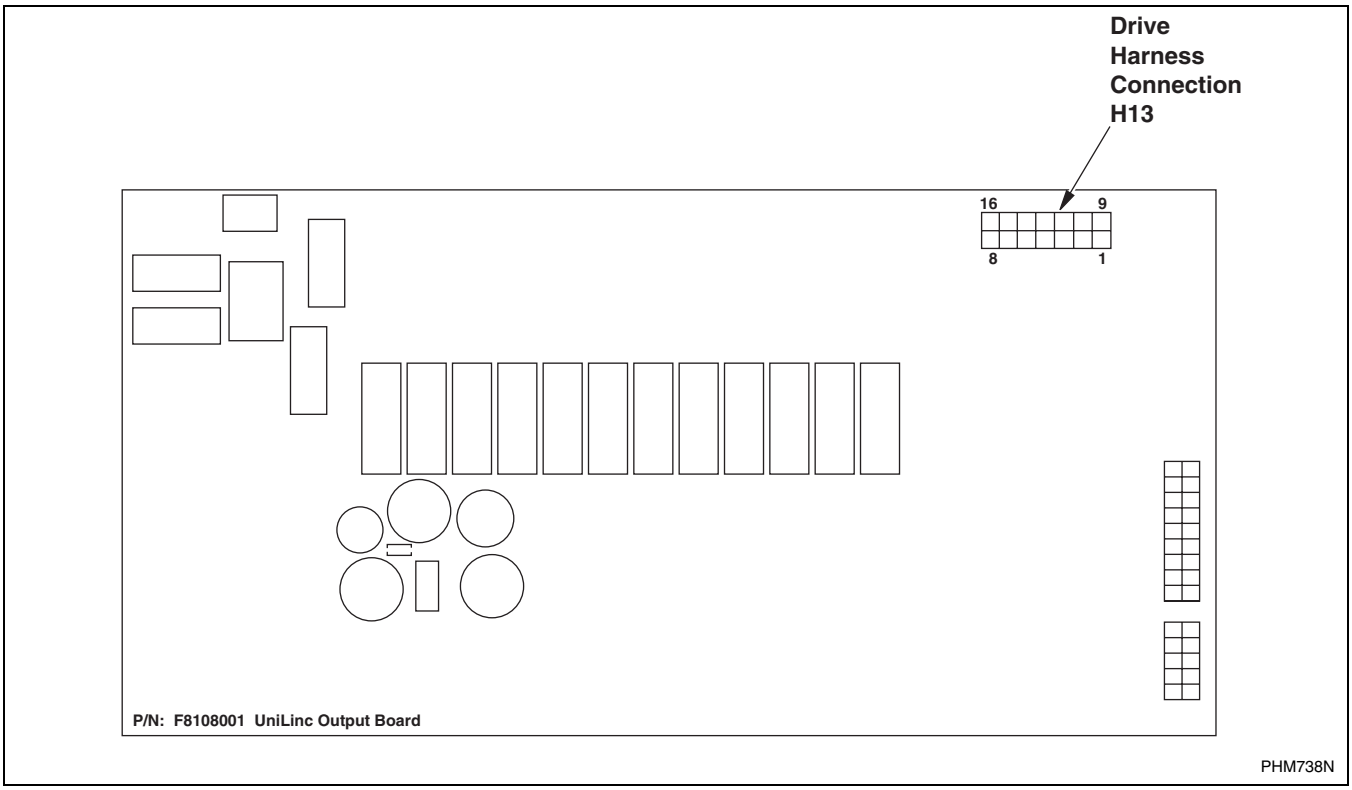

Figure 24

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Control Wire

During troubleshooting, if the wire path between the control board and the drive is uncertain, refer to *Table 25* for wire connection numbers.

Control Wire Connection Reference Table.

Output Board Terminal Terminal Designation	A-B 160 TB3	A-B 1305 TB2	A-B 1336 TB3	A-B Powerflex 40
V-Control F370314				
STF	6	6	19	2
STR	5	13	22	3
RH	4	18	28	7
RM	2	17	27	6
RL	1	16	26	5
COM	3	7	29	4
WE-6 Interface Board P/N: F370577, F0370446-xx				
J2A-30	3	7	29	4
J2A-31	2	17	27	6
J2A-32	6	6	19	2
J2A-33	4	18	26	7
J2A-34	1	16	28	5
J2A-35	5	13	22	3
EDC – Output Board P/N: F370433				
H2-7	4	18	NA	7
H2-8	2	17	NA	6
H2-9	1	16	NA	5
H2-10	3	7	NA	4
H2-11	5	13	NA	3
H2-12	6	6	NA	2
Unilinc Control– Output Board 200038000				
H13-2	3	N/A	29	4
H13-3	4	N/A	28	7
H13-4	2	N/A	27	6
H13-5	1	N/A	26	5
H13-6	5	N/A	22	3
H13-7	6	N/A	19	2

Table 25

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

AC Drive Diagnostics/Parameter Viewing

A-B 160 Program Keypad Module (PKM or Parameter Unit)

Installation/Removal

The following are instructions for installing/removing the Program Keypad Module (P/N F370851) on the A-B 160 Adjustable Frequency Drive for parameter viewing and basic troubleshooting. Refer to *Table 14*.

CAUTION

Users are prohibited from changing parameter values unless specifically instructed by the washer-extractor manufacturer. Modification to parameter values may present potential harmful operating conditions for both hardware and personnel.

W673

WARNING

To reduce risk of electric shock, severe injury or death, allow machine power to remain off for three minutes minimum prior to working in and around AC drive. Proceed with caution.

W662

Installing the PKM

1. Remove power from the machine at main disconnect. Delay approximately three minutes.
2. Insert a small screwdriver into slot, pry back, and remove status display cover. Refer to *Figure 25*.
3. Insert the PKM bottom end first and then press the symbol ↯ at the top of the module until the module is fully seated. The module is fully seated when its face is flush with the edges of its surrounding case.

Removing the PKM

1. Remove power from the machine at main disconnect. Delay approximately three minutes.
2. Insert small screwdriver into slot, pry back, and pivot module out. Avoid bending or twisting contact pins located underneath center portion of the module (*Figure 25*).
3. Reinstall the status display cover.

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

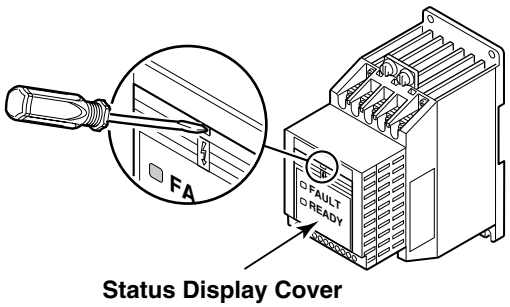

Status Display Cover

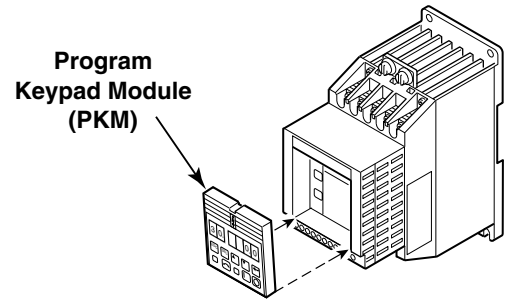

U090ME3A

STATUS DISPLAY COVER

Figure 25

Program Keypad Module (PKM) Operation

The PKM contains a six-digit display on the front. The parameter number is displayed as the left two digits and the value obtained from the right four digits (*Figure 26*).

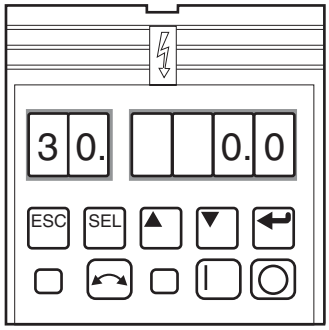

U091M

PROGRAM KEYPAD MODULE (PKM OR PARAMETER UNIT)

Figure 26

PKM – Key Explanation

ESC **Escape** key. Use to return to last or original position.

SEL **Select** key. Use to move cursor position.

Up arrow key. Scroll up.

Down arrow key. Scroll down.

Enter key. Use to enter program selection or new parameter value.

The PKM displays two groups of parameters: display and program. The parameters are listed in *Table 26*. The Display Group shows commonly viewed conditions that are helpful for troubleshooting problems. The Program Group contains parameters used to match the drive to a particular motor and application.

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Viewing a Display Group

(Parameters #1 – 16 for Series A & B or Parameters #1 – 19 for Series C)

1. Install PKM on A-B 160 drive. Refer to "Installation/Removal".
2. Turn on machine power.
3. Select the desired parameter by pressing the **Up** and **Down** arrow keys ▲ ▼. The parameter value is shown in the last four digits of the display.

CAUTION

Users are prohibited from changing parameter values unless specifically instructed by the washer-extractor manufacturer. Modification to parameter values may present potential harmful operating conditions for both hardware and personnel.

W673

Viewing a Program Group

(Parameters #30 – 80 for Series A & B or Parameters #30 – 86 for Series C)

1. Install PKM on A-B 160 drive. Refer to "Installation/Removal."
2. Turn on machine power.
3. The PKM begins in Display. Press the **ESC** key ESC to enter the Program Group.

NOTE: Confirmation of the mode is presented by a decimal point after the second parameter digit.

4. Parameter #30 should be displayed if entering the program group for the first time.
5. From this point, parameters #30 – 80 can be viewed by pressing the **Up** and **Down** arrow keys ▲ ▼.



6. To exit the Program Group, press the **ESC** key ESC.

A-B160 Display Mode Parameter Set

1	Output Frequency
2	Output Voltage
3	Output Current
4	Output Power
5	Bus Voltage
6	Frequency Command
7	Last Fault
8	Heatsink Temperature
9	Controller Status
10	Controller Type
11	Control Version
12	Input Status
13	Power Factor Angle
14	Memory Probe Address
15	Preset Status
16	Balance Angle
***17**	Fault Buffer 0
***18**	Fault Buffer 1
***19**	Fault Buffer 2

Table 26

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

A-B 160 CopyCat Keypad

(For use with A-B 160 Series C Drives P/N F370843, F370844, and F370853 – F370858)

The operation of the CopyCat Keypad requires the installation of the 160 Series C Parameter Unit Kit (F798751). The kit includes the following parts.

F370733 – Remote Programming Adapter (RPA)

F370732 – Connector Cable (Note: This cable is different than P/N F370716 used with the HIM units on the 1305 and 1336 Model Drives).

F370734 – CopyCat Keypad

CAUTION

Users are prohibited from changing parameter values unless specifically instructed by the washer-extractor manufacturer. Modification to parameter values may present potential harmful operating conditions for both hardware and personnel.

W673

WARNING

To reduce risk of electric shock, severe injury or death, allow machine power to remain off for three minutes minimum prior to working in and around AC drive. Proceed with caution.

W662

Remote Programming Adapter (RPA) Installation/Removal

Installing the RPA

1. Remove power from machine at main disconnect. Delay for approximately three minutes.
2. Insert a small screwdriver into slot, pry back, and remove status display cover.
   Refer to *Figure 27*.

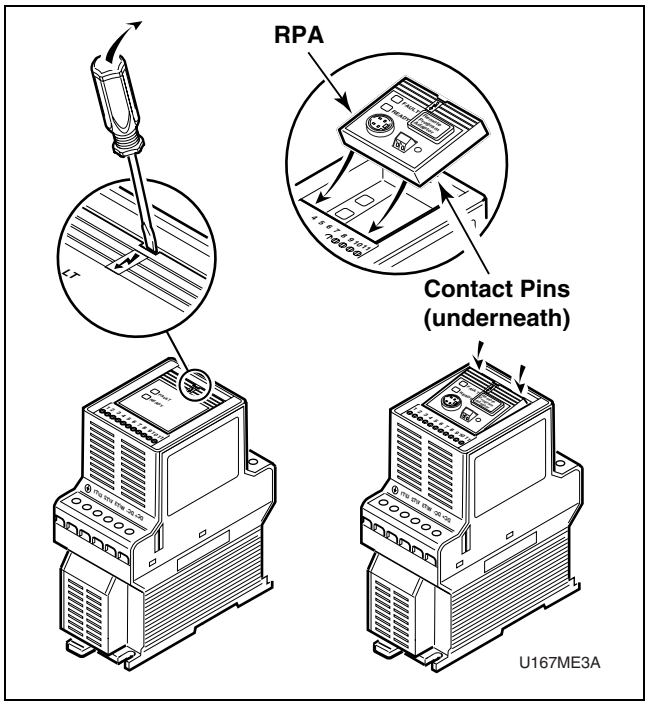

Figure 27

3. Insert the RPA bottom end first and then press the symbol ⚡ at the top of the adapter until its face is flush with the edges of its surrounding case.

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

CAUTION

It is required that the RPA be earth grounded to improve noise immunity and to guard the CopyCat Keypad against hazardous DC bus potential voltages.

W667

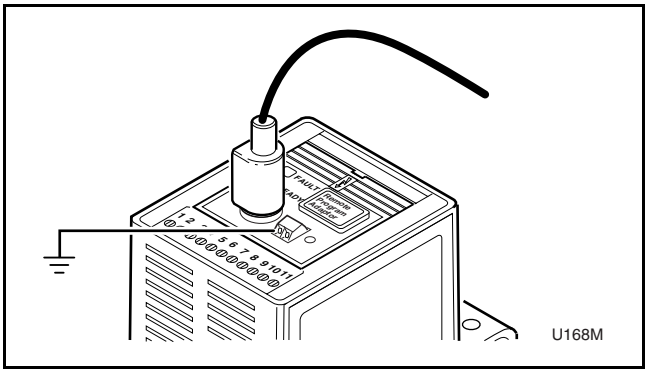

Figure 28

WARNING

A hazard of electric shock exists if the RPA is not tied to earth ground. Failure to provide an earth ground connection can result in severe personal injury or death.

W668

Removing the RPA

1. Remove power from machine at main disconnect. Delay approximately three minutes.
2. Insert small screwdriver into slot, pry back, and pivot module out. Avoid bending or twisting contact pins located underneath center portion of the module. Refer to *Figure 27*.
3. Reinstall the status display cover.

Connector Cable

To remove the cable from the drive or the CopyCat Keypad, pull back on the plastic housing of the cable connector. Refer to *Figure 29*. The connector cable has a locking mechanism to ensure the cable will not be accidentally disconnected.

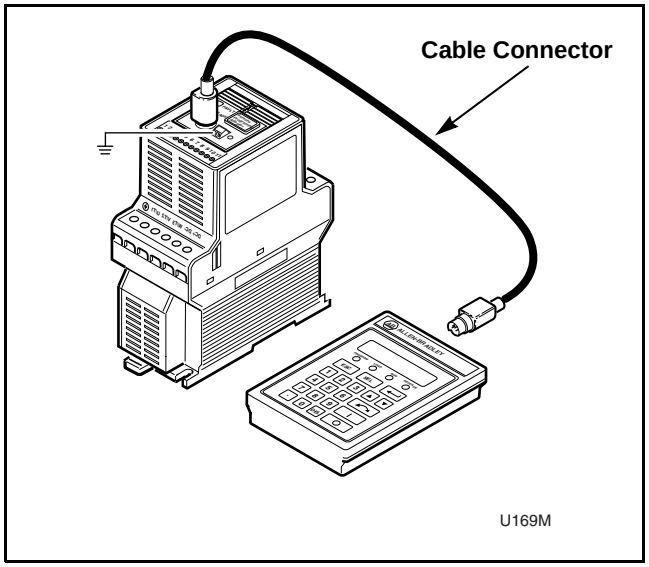

Figure 29

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

CopyCat Keypad Operation

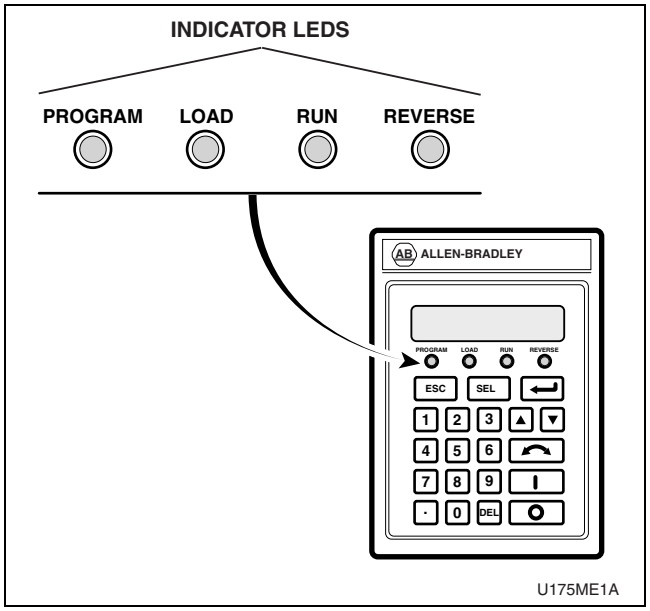

Figure 30

CopyCat Keypad – Key Explanation

Indicator LEDs. Indicate mode of operation.

ESC **Escape** key. Use to navigate a menu structure. Press to select mode of operation or, in Edit mode, to cancel an edit sequence.

SEL **Select** key. In Program mode, press to use Up or Down arrow keys to edit a parameter value.

Up and **Down** arrow keys. In Program mode, use to scroll parameter numbers or change a parameter value. In Load mode, use to select a menu option. In Display mode, use to scroll through display parameters.

Numeric keys. Numbers 0 through 9, decimal point, and Delete keys enable direct entry of parameter values.

Enter key. Press to save a new parameter value.

CAUTION

Users are prohibited from changing parameter values unless specifically instructed by the washer-extractor manufacturer. Modification to parameter values may present potential harmful operating conditions for both hardware and personnel.

W673

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Selecting a Parameter

There are two methods for selecting and viewing Display and Program Group parameters: scrolling through the parameters or entering the parameter number with the numeric keypad.

Scroll Parameter List

1. Connect CopyCat Keypad to A-B 160 Series C Drive. Refer to "Installation/Removal" in this section.
2. Turn on machine power.
3. For Display Group parameters (#1 – 19), press the **Escape** key [ESC] until the Program LED and Load LED are both off; for Program Group parameters (#30 – 86), press the **Escape** key until the Program LED lights.
4. Press the **Up** or **Down** arrow key [▲] [▼] to scroll to the next or previous parameter. Press and hold the **Up** or **Down** arrow key to increase scrolling speed.

Enter Parameter Number

1. Connect CopyCat Keypad to A-B 160 Series C Drive. Refer to "Installation/Removal".
2. Turn on machine power.
3. For Display Group parameters (#1 – 19), press the **Escape** key [ESC] until the Program LED and Load LED are both off; for Program Group parameters (#30 – 86), press the **Escape** key until the Program LED lights.
4. Enter the desired two-digit parameter number using the numeric keys.

   The display shows the parameter number entered. For example: >17.

   Output Current
   P-03: 0.00 >17

   To correct an entry, press the **Delete** key [DEL].

5. Press the Enter key [↵], and the newly selected parameter name, number and value are displayed.

   Fault Buffer 0
   P-17: Under Volt

   If the parameter number entered does not exist, an error message is displayed.

   ERROR, No
   Parameter P-33

6. Press the **Enter** key [↵] or the **Escape** key [ESC] to return to the previous parameter.

NOTE: Ensure the parameter to be displayed is in the group that is currently being displayed: Display Group (#1 – 19) or Program Group (#30 – 86). Refer to Step 3.

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

A-B 1305/1336 Human Interface Module (HIM or Parameter Unit)

Installation/Removal

The following are instructions for installing/removing the Human Interface Module (P/N F370597) on the A-B 1305 or 1336 Drive for parameter viewing and basic troubleshooting. The parameter unit (F370597) and instructions (F232120) are included in the A-B 1305/1336 Parameter Kit (P/N F744501).

CAUTION

Users are prohibited from changing parameter values unless specifically instructed by the washer-extractor manufacturer. Modification to parameter values may present potential harmful operating conditions for both hardware and personnel.

W673

WARNING

To reduce risk of electric shock, severe injury or death, allow machine power to remain off for three minutes minimum prior to working in and around AC drive. Proceed with caution.

W662

Installing the HIM

1. Remove power from machine at main disconnect. Delay approximately three minutes.
2. For the A-B 1305, lower the hinged panel located below the HIM. For the A-B 1336, remove the front cover.
3. Slide blank panel cover toward base of drive and remove it. Place top edge of HIM approximately 1/2 inch from top edge of the cover. Push inward on bottom of HIM and slide HIM up (toward the top of the drive) into position.

Removing the HIM

1. Remove power from machine at main disconnect. Delay approximately three minutes.
2. For the A-B 1305, lower hinged panel located below HIM. For the A-B 1336, remove front cover.
3. Press retaining lever located directly beneath HIM. Slide HIM downward and remove it from drive.
4. Reinstall blank panel cover. For the A-B 1305, close hinged panel. For the A-B 1336, replace front cover.

External HIM Connection

The HIM unit can be installed using an adapter cable (P/N P370716). This method of attaching the HIM uses an external connector shown in *Figure 31* and *Figure 32*. The HIM unit operates in the same manner in this configuration.

NOTE: If the HIM is removed while the drive is powered, a communication fault (Serial Fault #10) will occur and the drive will be disabled. Cycle power to the drive to reset the fault condition.

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

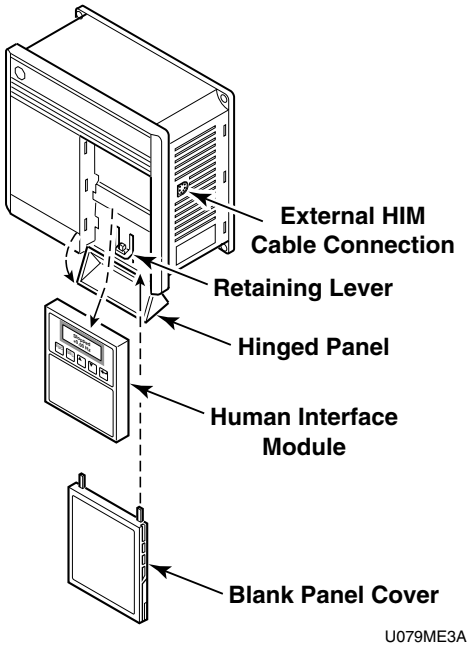

Figure 31

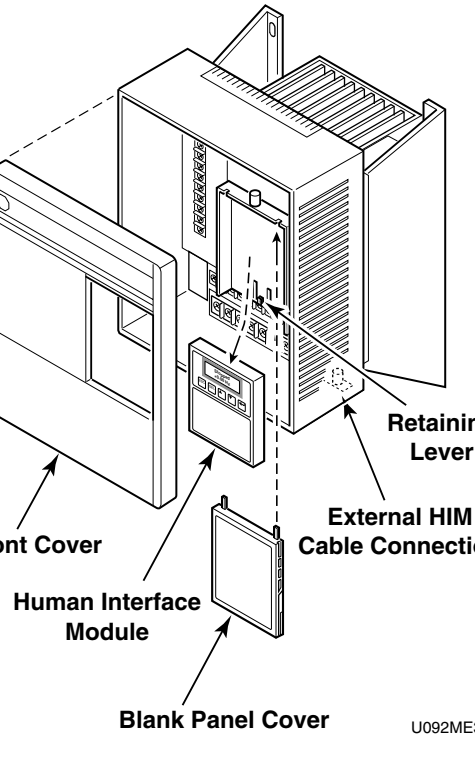

Figure 32

Human Interface Module (HIM) Operation

When power is first applied to the drive, the HIM will cycle through a series of displays. The displays will show drive name, HIM ID number, and communications status. Upon completion, the Status Display will be displayed. If a fault condition exists, it will appear on the display.

NOTE: If "Not Enabled" is displayed, the Enable input is not active. Check that the door is closed and locked, or that all necessary jumpers are in place. Refer to Section 2 of this manual.

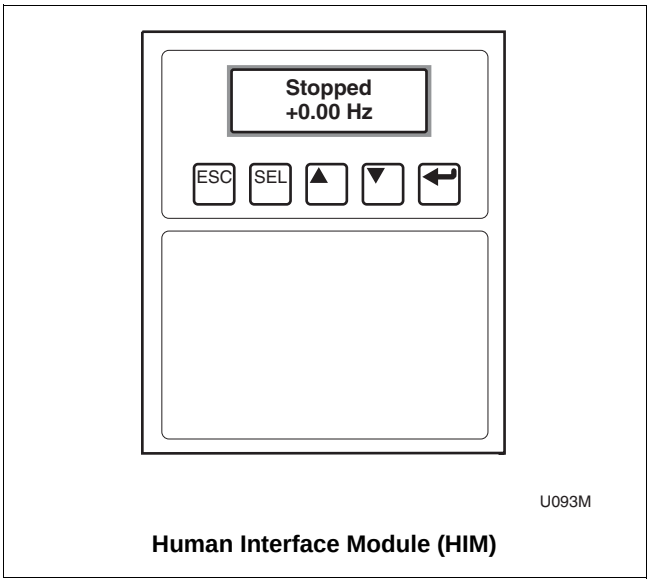

Figure 33

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

HIM – Key Explanation

ESC **Escape** key. Use to return to last or original position.

SEL **Select** key. Use to move cursor position.

Up arrow key. Scroll up.

Down arrow key. Scroll down.

Enter key. Use to enter program selection or new parameter value.

The structure charts on the following pages illustrate how to navigate between the levels to obtain information necessary for troubleshooting for earlier and later HIM versions.

The HIM Structure is broken into 4 levels: Operator Level, Mode Level, Group Level (Main File for earlier versions), and Parameter Level.

In the Group Level (Main File for earlier versions), only three Groups are used: Metering, Faults, and Linear List. Most diagnostic information is found in Metering or Faults.

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

HIM Structure Chart – Series A 3.00, Series B 1.01 or Later Versions

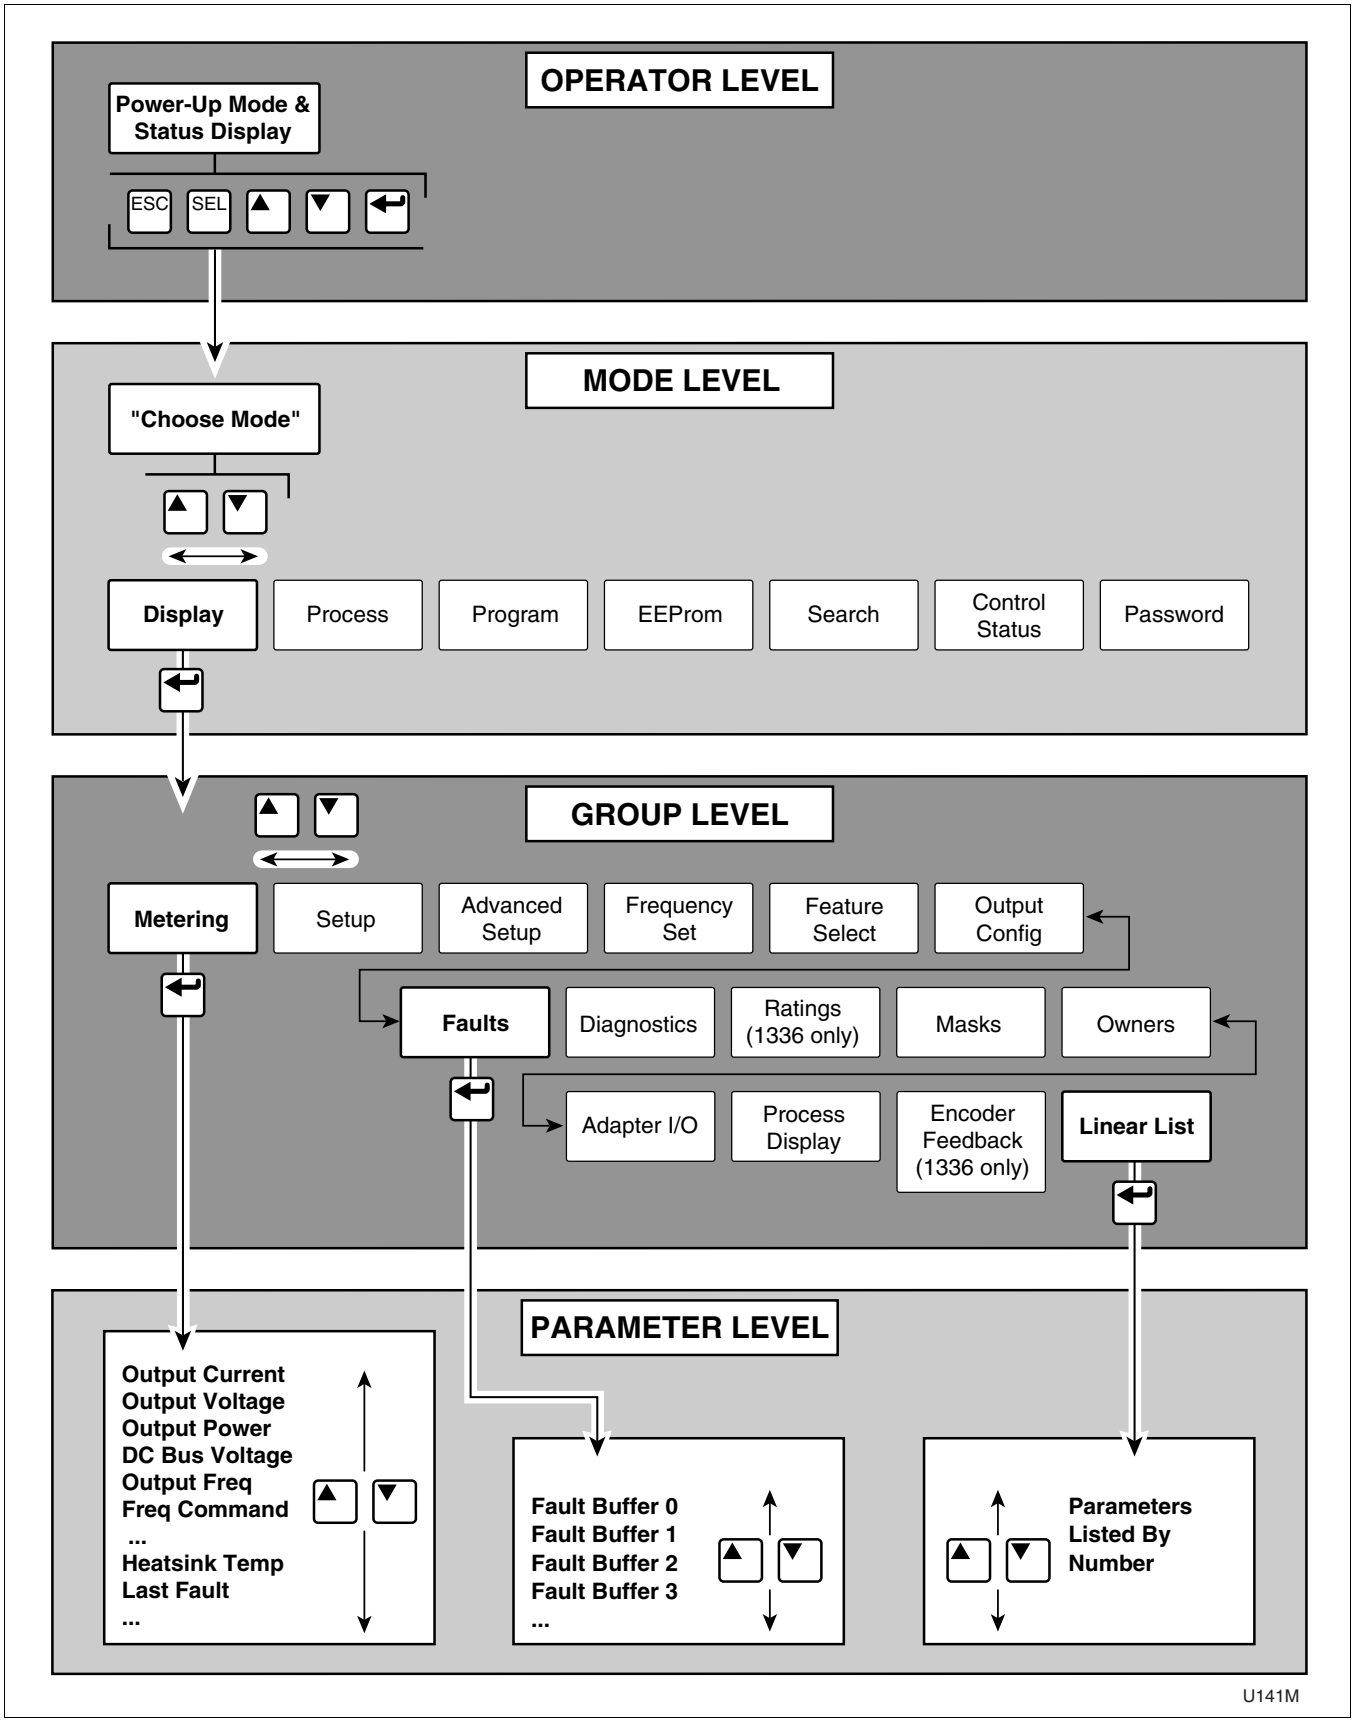

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

HIM Structure Chart – Earlier Versions

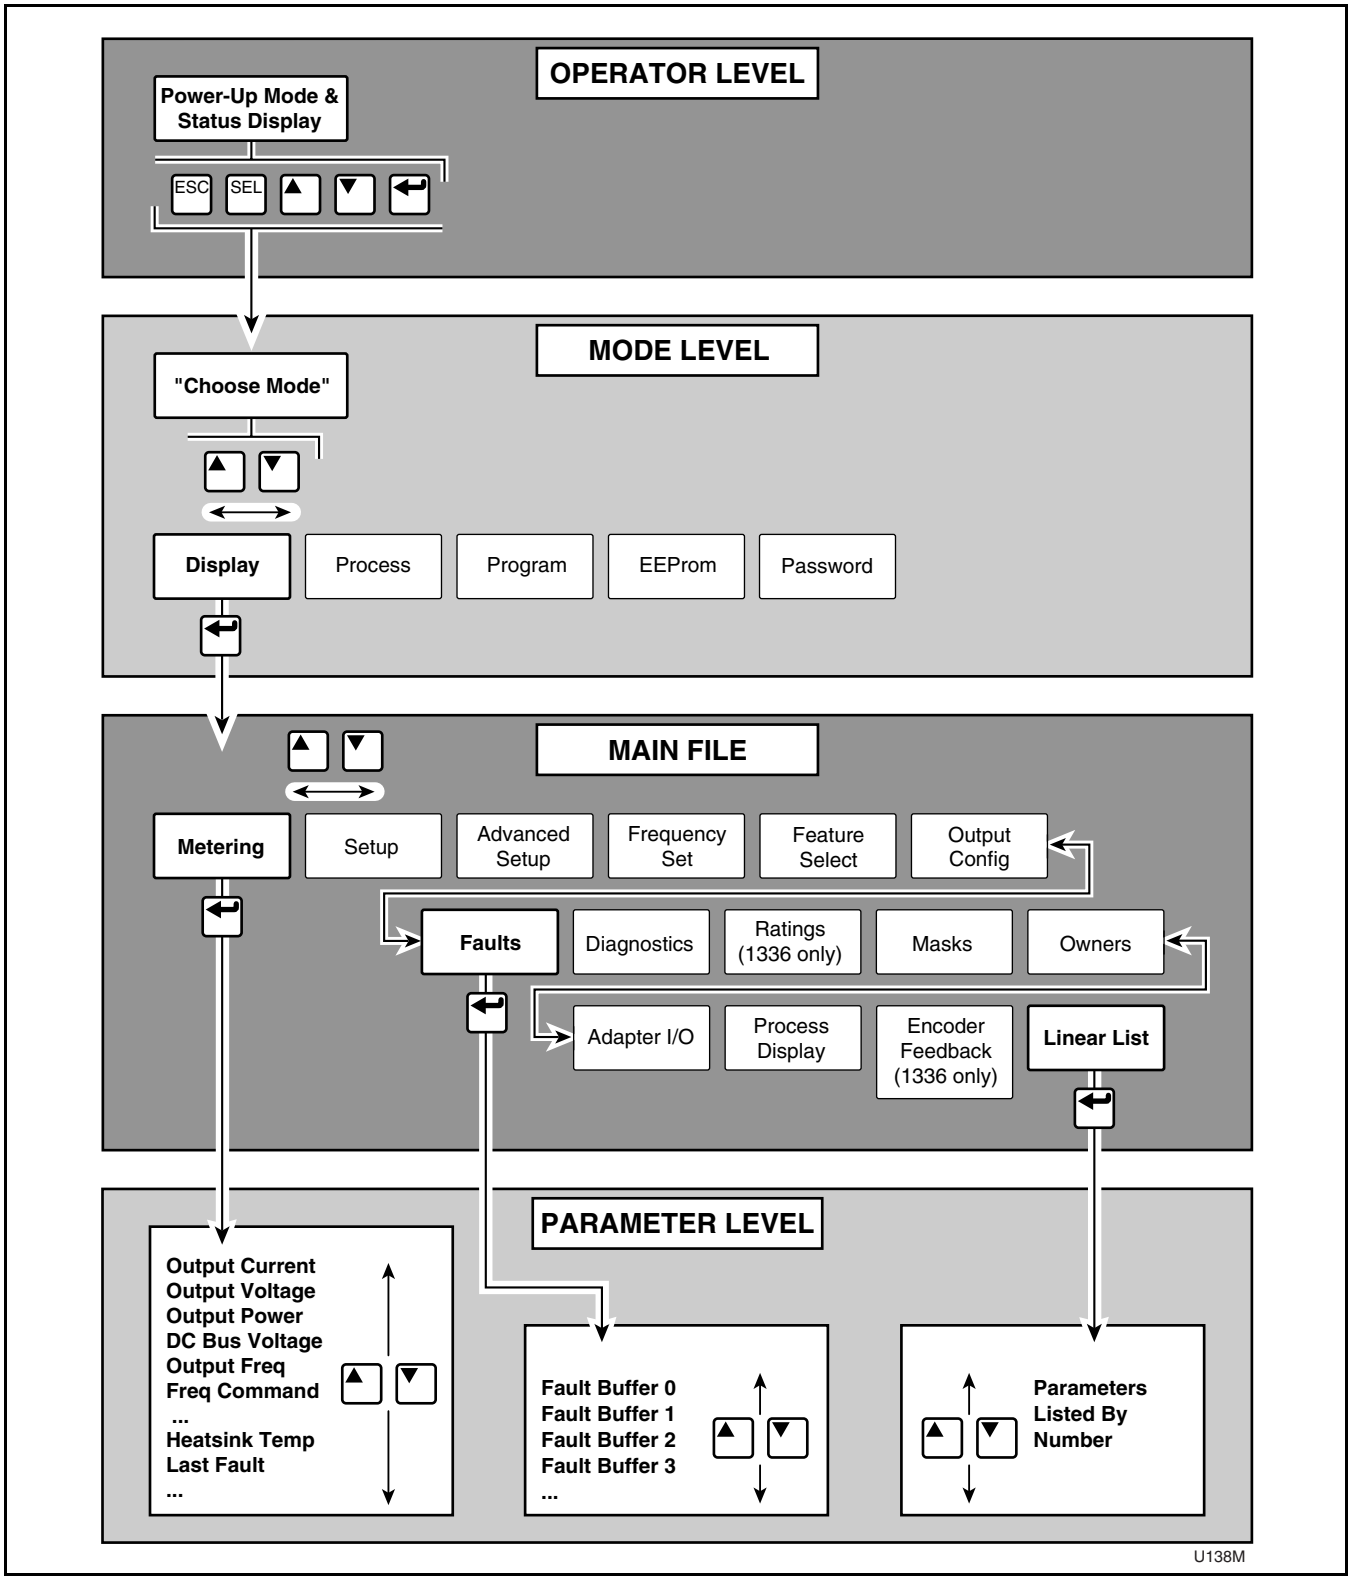

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

NOTE: The following programming instructions include information for two versions of HIMs (Human Interface Modules or parameter units). Refer to the nameplate information on the back of HIM to determine which programming information to use.

Displaying Metering Information

1. Install the HIM on the A-B drive.
2. Turn on machine power.
3. After three to five seconds of initialization, display will show the status display. If drive is in a faulted condition, fault will appear in display; otherwise, drive will read current status. Refer to examples below.

Faulted Drive

Fault Description Fault Number

Normal Condition

Status of Drive Frequency Commanded

Examples of Faults

Serial Fault F 10

Max Retries Fault F 33

Example of Normal Condition

Stopped +0.00 Hz

4. Press any key to enter Mode Level, [ESC] [SEL] [▲] [▼] [↵]. Display will read:

Choose Mode Display

5. Use the **Up** and **Down** arrow keys [▲] [▼] to select “Display” if not displayed immediately.
6. Press the **Enter** key [↵] to choose Group Level. Display will read:

Choose Group Metering

For earlier HIM versions, press the **Enter** key [↵] to choose Main File. Display will read:

Metering Main File

7. Use the **Up** and **Down** arrow keys [▲] [▼] to select “Metering” if not displayed immediately.
8. Press the **Enter** key [↵] to choose Parameter Level. Display now shows parameters under the “Metering” Group.

Output Current 0.00 Amps

9. Use the **Up** and **Down** arrow keys [▲] [▼] to select desired parameter display.
10. From this point, press the **Escape** key [ESC] to move display up one Level (i.e., press the **Escape** key three times to return to Operator Level).

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Displaying Fault Buffers

1. Install the HIM on the A-B drive.
2. Turn on machine power.
3. After three to five seconds of initialization, display will show the status display. If drive is in a faulted condition, fault will appear in display; otherwise, drive will read current status. Refer to examples below.

Faulted Drive

Fault Description
Fault Number

Normal Condition

Status of Drive
Frequency Commanded

Examples of Faults

Serial Fault
F 10

Max Retries Fault
F 33

Example of Normal Condition

Stopped
+0.00 Hz

4. Press any key to enter Mode Level, ESC SEL ▲ ▼ ↵. Display will read:

Choose Mode
Display

5. Use the **Up** and **Down** arrow keys ▲ ▼ to select “Display” if not displayed immediately.
6. Press the **Enter** key ↵ to choose Group Level. Display will read:

Choose Group
Faults

For earlier HIM versions, press the **Enter** key ↵ to choose Main File. Display will read:

Faults
Main File

7. Use the **Up** and **Down** arrow keys ▲ ▼ to select “Faults.”
8. Press the **Enter** key ↵ to choose Parameter Level. Display now shows parameters under the “Faults” Group.

Fault Buffer 0
48

9. Use the **Up** and **Down** arrow keys ▲ ▼ to select desired fault buffer display.
10. From this point, press the **Escape** key ESC to move display up one Level (i.e., press the **Escape** key three times to return to Operator Level).

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Displaying Linear List of Parameters

1. Install the HIM on the A-B drive.
2. Turn on machine power.
3. After three to five seconds of initialization, display will show the status display. If drive is in a faulted condition, fault will appear in display; otherwise, drive will read current status. Refer to examples below.

Faulted Drive

Normal Condition

Examples of Faults

Example of Normal Condition

4. Press any key to enter Mode Level,

. Display will read:

5. Use the **Up** and **Down** arrow keys to select “Display” if not displayed immediately.
6. Press the **Enter** key to choose Group Level. Display will read:

For earlier HIM versions, press the **Enter** key to choose Main File. Display will read:

7. Use the **Up** and **Down** arrow keys to select “Linear List.”
8. Press the **Enter** key to choose Parameter Level. Display now shows all parameters in numerical order.

9. Use the the **Up** and **Down** arrow keys to select desired parameter display.
10. From this point, press the **Escape** key

to move display up one Level (i.e., press the **Escape** key three times to return to Operator Level).

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

PowerFlex Human Interface Module (HIM or Parameter Unit)

The PowerFlex series AC drives have an integral keypad that can be used for viewing and editing parameter values. No external parameter unit is required, however an external hand-held parameter unit is available (22-HIM-A3) that can provide a user-friendly method of viewing and editing parameter values in hard-to-access locations.

Integral Keypad

The integral keypad displays several main menu group selections such as “d”, “P”, and “A” as described below. Within the Display Group is a fault storage buffer that stores the last three AC drive fault codes. Refer to Section 4 of this manual for Fault Display and Troubleshooting Information.

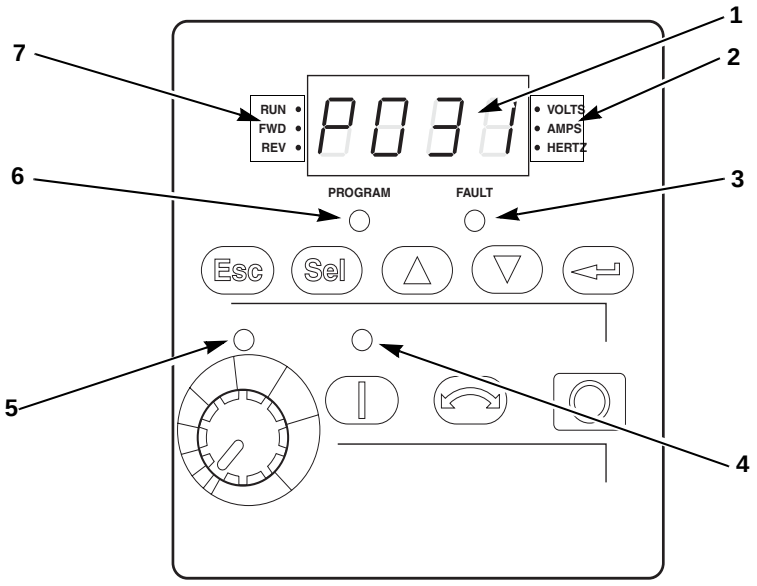

POWERFLEX LED DISPLAYS

PHM640N

Number	LED	LED State	Description
1	Display	Steady Red	Indicates parameter number, parameter value, or fault code.
		Flashing Red	Single digit flashing indicates that digit can be edited. All digits flashing indicates a fault condition. See table below.
2	Displayed Units	Steady Red	Indicates the units of the parameter value being displayed.
3	Fault Status	Flashing Red	Indicates drive is faulted.
4	Start Key Status	Steady Green	Indicates Start key on Integral Keypad is active. The Reverse key is also active unless disabled by A095 (Reverse Disable).
5	Pot Status	Steady Green	Indicates potentiometer on Integral Keypad is active.
6	Program Status	Steady Red	Indicates parameter value can be changed.
7	Run/Direction Status	Steady Red	Indicates drive is running and commanded motor direction.
		Flashing Red	Drive has been commanded to change direction. Indicates actual motor direction while decelerating to zero.

Figure 34

PowerFlex 40 Alphanumeric LED Display Groups			
Menu	**Description**	**Menu**	**Description**
d	**Display Group (View Only)**. Consists of commonly viewed drive operating conditions.	A	**Advanced Program Group**. Consists of remaining programmable functions.
P	**Basic Program Group**. Consists of most commonly used programable functions.	F	**Fault Designator**. Consists of list of codes for specific fault conditions. Displayed only when fault is present.

Table 27

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

PowerFlex 400 Alphanumeric LED Display Groups			
Menu	**Description**	**Menu**	**Description**
b	Basic Display	**A**	Advanced Program
C	Communications	**T**	Terminal Block
d	Advanced Display	**R**	Aux Relay Card
P	Basic Program		

Table 28

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

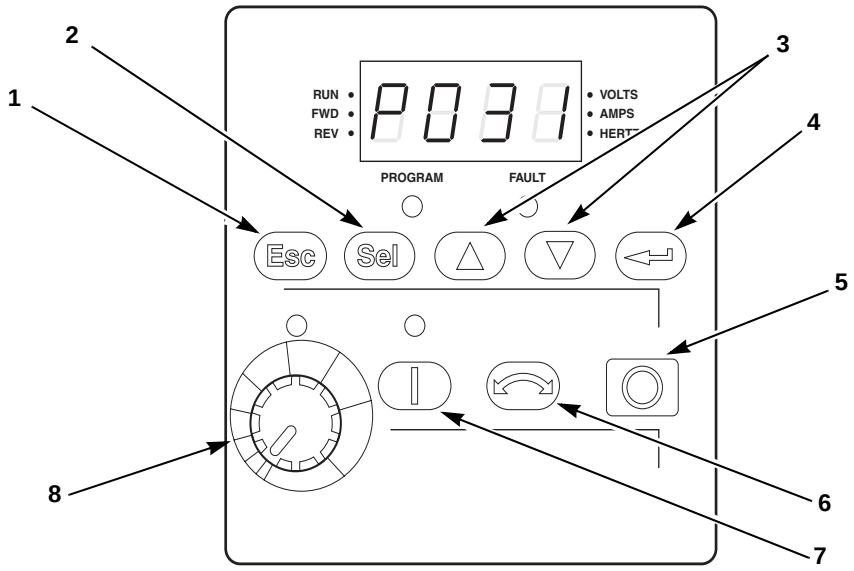

POWERFLEX KEYPAD BUTTONS

PHM640

Number	Name	Description
1	Escape	Back one step in programming menu. Cancel a change to a parameter value and exit Program Mode.
2	Select	Advance one step in programming menu. Select a digit when viewing parameter value.
3	Up Arrow Down Arrow	Scroll through groups and parameters. Increase/decrease the value of a flashing digit.
4	Enter	Advance one step in programming menu. Save a change to a parameter value.
5	Stop	Used to stop the drive or clear a fault. This key is always active. Controlled by parameter P037 (Stop Mode).
6	Reverse	Used to reverse direction of the drive. Default is active. Controlled by parameters P036 (Start Source) and A095 (Reverse Disable).
7	Start	Used to start the drive. Default is active. Controlled by parameters P036 (Start Source).
8	Potentiometer	Used to control speed of drive. Default is active. Controlled by parameter P038 (Speed Reference).

Figure 35

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Viewing and Editing Parameters

The last user-selected Display Group parameter is saved when power is removed and is displayed by default when power is reapplied.

The following is an example of basic integral keypad and display functions. This example provides basic navigation instructions and illustrates how to program the first Program Group parameter.

Step	Description	Key(s)	Example Displays
1	When power is applied, the last user-selected Display Group parameter number is briefly displayed with flashing characters. The display then defaults to that parameter's current value. (Example shows the value of d001 [Output Freq.] with the drive stopped.)		
2	Press Esc once to display the Display Group parameter number shown on power-up. The parameter number will flash.	Esc	
3	Press Esc again to enter the group menu. The group menu letter will flash.	Esc	
4	Press the Up Arrow or Down Arrow to scroll through the group menu (d, P and A).	△ or ▽	
5	Press Enter or Sel to enter a group. The right digit of the last viewed parameter in that group will flash.	↵ or Sel	
6	Press the Up Arrow or Down Arrow to scroll through the parameters that are in the group.	△ or ▽	
7	Press Enter or Sel to view the value of a parameter. If you do not want to edit the value, press Esc to return to the parameter number.	↵ or Sel	
8	Press Enter or Sel to enter program mode to edit the parameter value. The right digit will flash and the Program LED will illuminate if the parameter can be edited.	↵ or Sel	
9	Press the Up Arrow or Down Arrow to change the parameter value. If desired, press Sel to move from digit to digit or bit to bit. The digit or bit that you can change will flash.	△ or ▽	
10	Press Esc to cancel a change. The digit will stop flashing, the previous value is restored and the Program LED will turn off. OR Press Enter to save a change. The digit will stop flashing and the Program LED will turn off.	Esc ↵	
11	Press Esc to return to the parameter list. Continue to press Esc to back out of the programming menu. If pressing Esc does not change the display, then d001 (Output Frequency) is displayed. Press Enter or Sel to enter the group menu.	Esc	

Table 29

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Fault Display and Troubleshooting Information

This section provides information to guide users in understanding drive fault conditions and general troubleshooting procedures for Allen-Bradley drives. Included is a listing and description of the various drive faults with possible solutions, when applicable. For any questions regarding fault conditions, consult with the factory.

Each drive is equipped with a fault indicator light which illuminates when a fault condition exists.

Fault Code Identification

A-B 160

When a fault occurs, the fault indicator light will illuminate on the front cover of the A-B 160 drive, as shown in *Figure 36*. To view the fault type, the PKM or CopyCat Keypad must be installed. The A-B 160 fault number is located in parameter #07. Refer to PKM or CopyCat Keypad installation and operation. The PKM will flash the display when a fault is present as shown below (i.e., Fault Code 22). Cross reference the number in *Table 30* for fault identification and possible corrective action.

In addition, A-B 160 Series C fault codes are stored in a fault buffer with the capability to store up to three fault codes. If more than three faults are identified, the least recent fault is deleted to make room for the additional fault. “Fault Buffer 0” is the most recent fault. The faults are viewed using a PKM as shown below. Refer to PKM installation and operation.

The fault parameters are identified as follows:

“Last Fault”	Parameter #7	Most Recent
“Fault Buffer 0”	Parameter #17	Most Recent (same as Parameter #7)
“Fault Buffer 1”	Parameter #18	–
“Fault Buffer 2”	Parameter #19	–

Fault Parameter		Fault Code			
0	7			2	2

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

A-B 1305/A-B 1336

When the A-B 1305 and A-B 1336 drives encounter a fault, an LED is illuminated. Refer to *Figure 37* and *33*, respectively. These LEDs are viewed with the front cover removed. To view the specific fault description, the HIM (parameter unit) must be installed. Refer to HIM installation and operation.

Once the HIM is installed, the current fault condition is displayed as shown below with the corresponding fault code. Cross reference the number in *Table 30* for fault identification and possible corrective action.

In addition, A-B 1305 and A-B 1336 fault codes are stored in a fault buffer with the capability to store up to four fault codes. If more than four faults are identified, the least recent fault is deleted to make room for the additional fault. “Fault Buffer 0” is the most recent fault. The faults are viewed using a HIM as shown below. Refer to HIM installation and operation.



The fault parameters are identified as follows:

“Last Fault”	Parameter #4	Most Recent
“Fault Buffer 0”	Parameter #86	Most Recent (same as Parameter #4)
“Fault Buffer 1”	Parameter #87	–
“Fault Buffer 2”	Parameter #88	–
“Fault Buffer 3”	Parameter #89	Least Recent

NOTE: FOR A-B 1336 ONLY. During normal operating conditions (no faults present, drive running) the fault contacts at TB2-13 & 14 are open, and the contacts at TB2-14 & 15 are closed. When a fault occurs, the state of these contacts will change. On some machine models, this contact is connected to a fault indicator light.

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Clearing Faults

When a fault occurs, the cause must be corrected before the fault can be cleared. Resetting a fault will not correct the cause of the fault condition. After corrective action has been taken, simply cycling power to the drive will clear the fault.

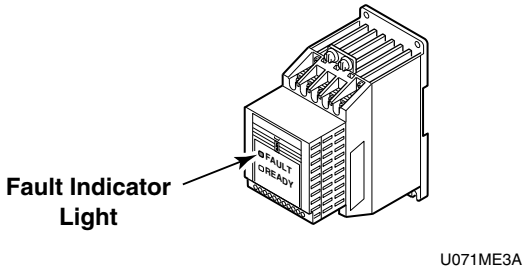

FAULT INDICATOR LIGHT LOCATION

Figure 36

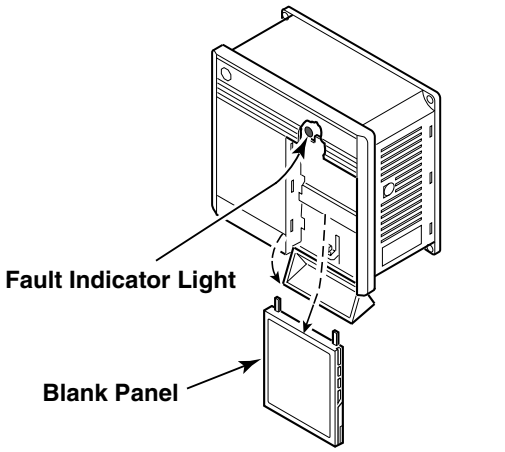

A-B 1305 FAULT INDICATOR LIGHT LOCATION

Figure 37

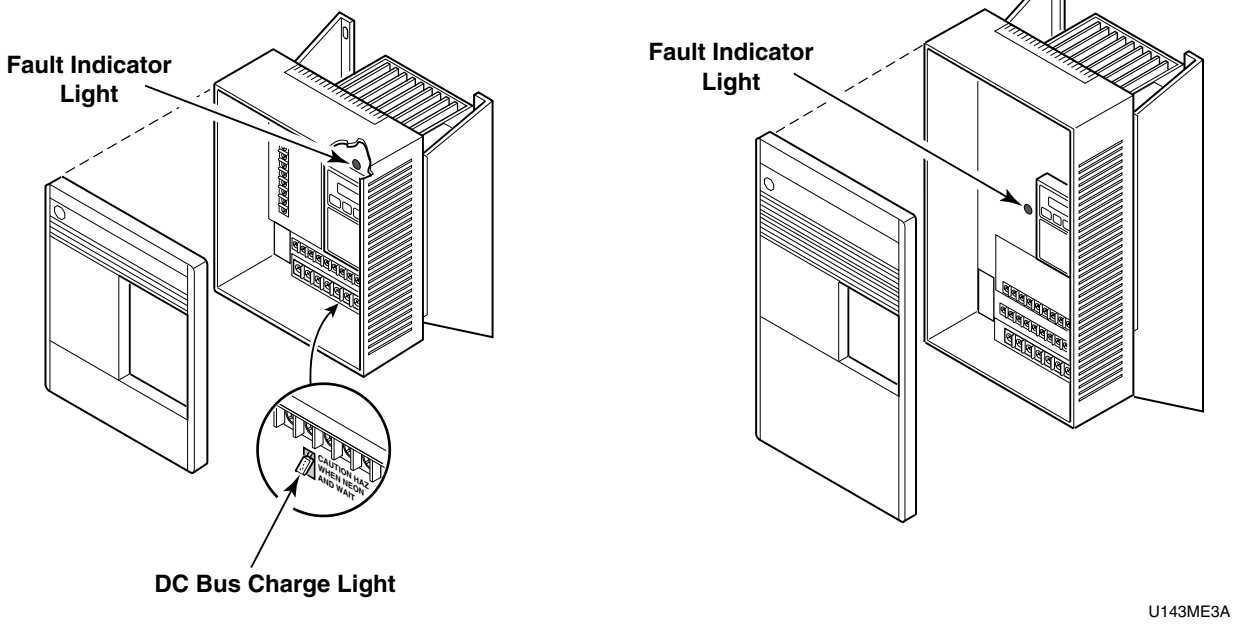

A-B 1336 FAULT INDICATOR LIGHT LOCATION

Figure 38

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

PowerFlex Series Drives

When a fault occurs, the fault indicator light on the integral keypad will illuminate. The fault code will immediately be indicated on the display, such as “F005”. The last three fault codes are also stored in the fault buffer located in parameter “d007”, “d008” and “d009”, with the most recent fault code stored in “d007” and the oldest fault code stored in “d009”. Repetitive faults of the same fault code will only be recorded once.

Refer to Viewing and Editing Parameters section of AC Drive Diagnostics/Parameter Viewing chapter for details on how to access parameter values.

Once a fault code is identified, refer to the AC drive manual for the most up-to-date explanation of codes. *Table 30* also contains an abbreviated list of typical fault codes.

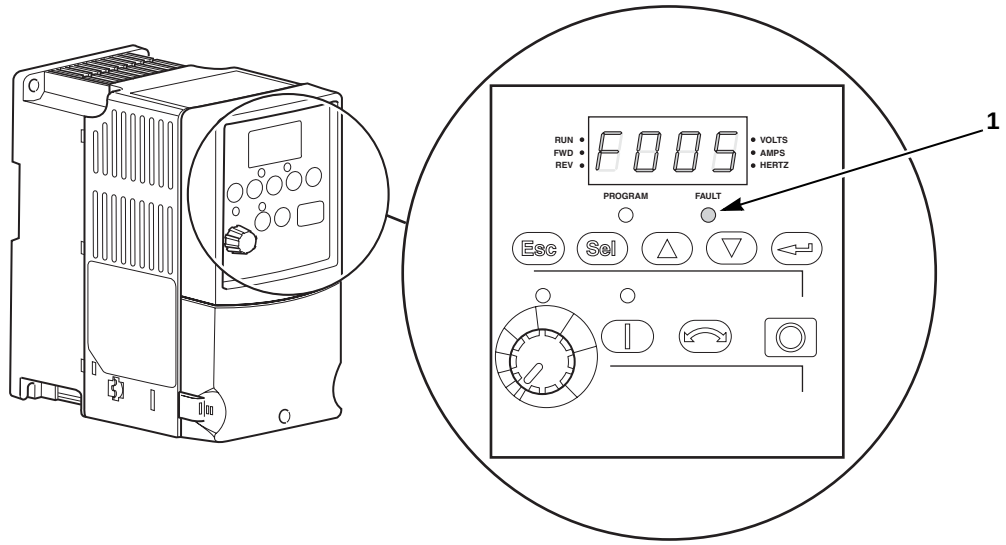

POWERFLEX SERIES AC DRIVES

PHM651N

1 Fault Indicator Light

Figure 39

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Allen-Bradley Drive Fault Codes

Allen-Bradley Drive Fault Codes						
PowerFlex Series	Bulletin 160	Bulletin 1305	Bulletin 1336	Fault	Description	Corrective Action/ Remarks
			02	Motor Temp Fault	The motor thermal switch path is open.	Motor temperature high. Check for: ambient air, cooling fan blockage or operation, break in switch wire path (not on all machines).
003	03	03	03	Power Loss Fault	DC Bus voltage remains below 85% nominal for longer than 0.005 seconds.	Monitor incoming AC line for low voltage or line power interruption.
004	04	04	04	Under Voltage Fault	DC Bus voltage fell below minimum.	Monitor AC incoming AC line for low voltage or line power interruption.
005	05	05	05	Over Voltage Fault	DC Bus maximum voltage exceeded.	Monitor the AC line for high line voltage or transient conditions. High voltage can result from motor regeneration. Buck transformer may be required.
006	06	06	06	Motor Stall	Motor has stalled. Motor load is excessive.	Check motor wiring and connection terminals. Check wash basket freedom of movement and excess belt tension.
007	07	07	07	Motor Overload Fault	Internal electronic overload trip. Excessive motor load exists.	Check motor wiring and connection terminals. Check wash basket freedom of movement and excess belt tension.
008	08	08	08	Over Temperature Fault	Excessive heat detected by heatsink transducer.	Clear blocked or dirty heatsink fins. Check ambient temperature. Check for blocked or nonoperating fan.
		10	10	Serial Fault	Drive lost communication with controlling device.	HIM removed while power applied, cycle power to clear.
012	12	12	12	Overcurrent Fault	Overcurrent detected in instantaneous hardware trip circuit.	Check short circuit at the controller output or excessive load conditions at motor.
N/A	22	22	22	Controller Reset Fault	Stop input not present.	Check stop input into control terminal board. Close door and ensure any jumpers are placed correctly.
	32	32	32	EEPROM Fault	EEProm has invalid data.	Consult the factory for further instructions.
033	33	33	33	Max Retries Fault	Controller failed to reset fault within the number of retries.	Fault exists that must be corrected before further operation. Check “Fault Buffer 1” on 1305 and 1336 for specific fault that triggered max retries fault.
038	38	38	38	Phase U Fault	Phase-to-ground fault detected between controller and motor in Phase U.	Check wiring between the drive and motor. Check for grounded phase.

Table 30 (continued)

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Table 30 (continued)

Allen-Bradley Drive fault Codes						
PowerFlex Series	Bulletin 160	Bulletin 1305	Bulletin 1336	Fault	Description	Corrective Action Remarks
039	39	39	39	Phase V Fault	Phase to ground fault detected between controller and motor in Phase V.	Check wiring between the drive and motor. Check for grounded phase.
040	40	40	40	Phase W Fault	Phase to ground fault detected between controller and motor in Phase W.	Check wiring between the drive and motor. Check for grounded phase.
041	41	41	41	UV Short Fault	Excessive current has been detected between two controller output terminals.	Check motor and external wiring to the controller output terminals for shorted condition.
042				UW Short Fault	Excessive current has been detected between two controller output terminals.	Check motor and external wiring to the controller output terminals for shorted condition.
043	43	43	43	VW Short Fault	Excessive current has been detected between two controller output terminals.	Check motor and external wiring to the controller output terminals for shorted condition.
		44		IPM Current Fault	Internal power module overcurrent limit exceeded.	Check for short circuit at the drive output or excessive load conditions at the motor, specifically cable capacitance to ground.
		45		IPM Overtemp Fault	Internal power module thermal limit exceeded.	Check for blocked or dirty heatsink fins. Check ambient air. Check fan operation or filter blockage.
			57	Ground Warning	A current path to ground in excess of 2A has been detected at one or more of the drive output terminals.	Check motor and external wiring to drive output terminals for a grounded condition.

Table 30

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT

Troubleshooting Suggestions

Important Considerations

- Drive cooling is extremely important to the overall service life of the product. Extreme care should be used to keep cooling air paths clean. Drive cabinet enclosures have been designed to optimize cooling. Keep cabinet doors closed and panels installed to maintain proper operation.
- Resetting a fault will not correct the cause of the fault condition. Corrective action must be taken prior to resetting a fault. Many drive error codes are reset by cycling power to the drive. The fault may not reappear until drive operation is initiated.
- Drive to motor wiring is critical to proper drive operation. Loose or bad connections can generate heat and increase current output from drive. These problems can manifest themselves in operation by many fault codes indicating overcurrent condition and maximum retries fault.

Problem/Corrective Action

Problem:

Wash basket does not rotate.

Corrective Action

1. Ensure computer control display on washer is showing proper operation.
2. Check power circuit, supply voltage, fuses and disconnects.
3. Verify drive to motor wires are damage free, properly connected and torqued to specifications.
4. Check belt tension and condition.
5. Verify no mechanical problems exist (i.e., binding, motion restriction).
6. Check control input signals. Refer to applicable table of inputs.

Problem:

Drive started but wash basket is not rotating.

Corrective Action

1. Verify drive to motor wires are damage-free, properly connected and torqued to specifications.
2. Verify no mechanical problems exist (i.e., binding, motion restriction).
3. Check control input signals. Refer to applicable table of inputs.

Problem:

Wash basket not accelerating properly.

Corrective Action

1. Verify drive to motor wires are damage-free, properly connected and torqued to specifications.
2. Verify speed selection control wire connections. Refer to applicable table.

Problem:

Drive gives Serial Fault (F10) when HIM is removed from the drive.

Corrective Action

1. Cycle power to drive to clear the fault.

When a HIM is disconnected with the drive powered, communication is lost and a fault results. Always remove power from the drive prior to HIM or PKM removal or installation.

Problem:

HIM displays “Pin ID Error” or “Network Error.” (1305/1336 Models Only)

Corrective Action

1. Place the HIM directly on the drive.

This communication error with the drive may be the result of a bad cable or connector that establishes communication with the HIM.

Problem:

HIM displays “Not Enabled.” (1305 / 1336 Models Only)

Corrective Action

1. Verify the jumper connecting the control terminal “Enable” to “Common” is present and is not loose.

This connection must be present to enable the drive.

Problem:

A-B 160 Model displays fault code #22 (i.e., “0722”).

Corrective Action

1. Verify connection between TB3 terminals 7 and 8.

This fault is most likely caused by the absence of the Stop Input.

© Copyright, Alliance Laundry Systems LLC – DO NOT COPY or TRANSMIT